

<b>INSTALLATION BASE</b>	model <b>5BX</b>
--------------------------	------------------

Thank you for choosing us. Before use, check specifications on the unit label.  
 If you have any problems or questions with the product, please contact our sales office or representatives.


**General Description**

The Model 5BX saves individual wiring work for panel installation of 5-UNIT.

- High density mounting
- 16 outputs available at connector
- Printing wiring for line voltage distribution
- Monitoring at screw terminals

**Installation** [Scale : mm(inch)]

- Operating temperature: -5 to +60°C (23 to 140°F)
  - Operating humidity: 30 to 90% RH (non-condensing)
- Keep away from water, corrosive gas, dust and vibration.  
 Mounting dimensions are as in the below.

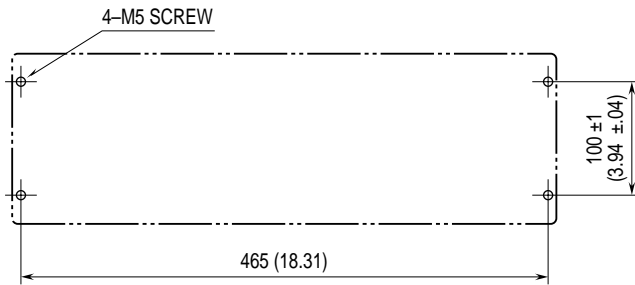

**Connector Pin Arrangement**

No.	XMTR OUTPUT	PIN NO.		No.	XMTR OUTPUT	PIN NO.	
		A SIDE	B SIDE			A SIDE	B SIDE
No. 1	ch. 1 + ch. 2 +	1	1	No. 11	ch. 1 + ch. 2 +	11	11
No. 2	ch. 1 + ch. 2 +	2	2	No. 12	ch. 1 + ch. 2 +	12	12
No. 3	ch. 1 + ch. 2 +	3	3	No. 13	ch. 1 + ch. 2 +	13	13
No. 4	ch. 1 + ch. 2 +	4	4	No. 14	ch. 1 + ch. 2 +	14	14
No. 5	ch. 1 + ch. 2 +	5	5	No. 15	ch. 1 + ch. 2 +	15	15
No. 6	ch. 1 + ch. 2 +	6	6	No. 16	ch. 1 + ch. 2 +	16	16
No. 7	ch. 1 + ch. 2 +	7	7	COM -		17	17
No. 8	ch. 1 + ch. 2 +	8	8	COM -		18	18
No. 9	ch. 1 + ch. 2 +	9	9	COM -		19	19
No. 10	ch. 1 + ch. 2 +	10	10	UNUSED		20	20

**Troubleshooting**

- A) Power wiring and polarity
- B) Check that each module is properly plugged in a socket on the back-board. Individual socket shipped from Factory with the module is not required.
- C) Power: Check voltage across the terminals to show 24V DC ±10%. Be sure that ripple level is below 10%p-p.

**Terminal Connections**

