

MOUNTING SPACER

Functions & Features

- Used to mount the 6DV Loop-powered Indicator on a wall or inside the 6BX-E enclosure, with or without the Field-mount Transmitters 26-UNIT and 27-UNIT
- Tightened with screws using the transmitter's mounting holes

MODEL: A-6-[1]

ORDERING INFORMATION

- Code number: A-6-[1]

Specify a code from below for [1].

(e.g. A-6-27)

[1] ADAPTED DEVICE

S: 6DV (short)

L: 6DV (long)

26: 26-UNIT (except 26R or 26FR) + 6DV

27: 27-UNIT + 6DV

GENERAL SPECIFICATIONS

Mounting screw: Attached

Wire: Attached to A-6-26 and -27

INSTALLATION

Operating temperature: -40 to +85°C (-40 to +185°F)

(within the limit of the operating temperature for the transmitter/indicator)


Operating humidity: 0 to 95 %RH (non-condensing)

Mounting

- Wall surface: M4 screw hole, min. 7-mm deep
- Panel surface: Max. 3-mm panel thickness
- Outdoor enclosure: Model 6BX-E


Weight: 20 g (0.71 oz)

MOUNTING REQUIREMENTS unit: mm (inch)

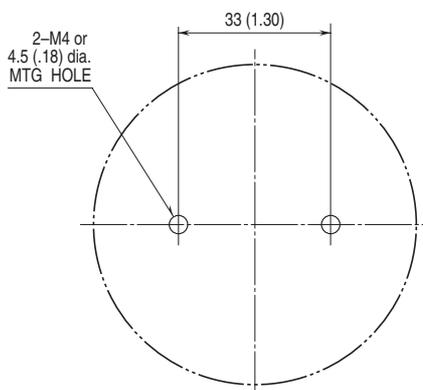


EXTERNAL DIMENSIONS unit: mm [inch]


■ MOUNTING MODEL 6DV (short)

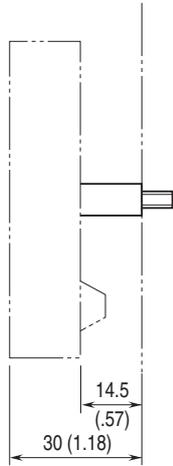


■ MOUNTING THE 26-UNIT + 6DV

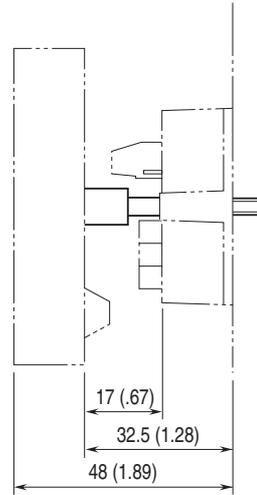

■ MOUNTING MODEL 6DV (long)

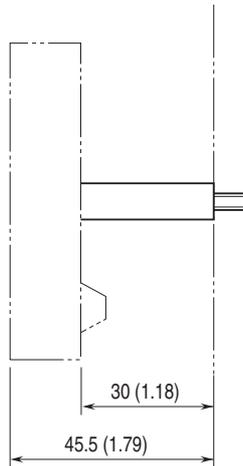

■ MOUNTING THE 27-UNIT + 6DV

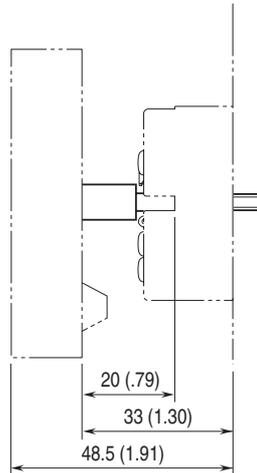

Specifications are subject to change without notice.