

BEFORE USE

Thank you for choosing us. Before use, please check contents of the package you received as outlined below. If you have any problems or questions with the product, please contact our sales office or representatives.

PACKAGE INCLUDES:

Remote control relay control module(1)

MODEL NO.

Confirm Model No. marking on the product to be exactly what you ordered.

INSTRUCTION MANUAL

This manual describes necessary points of caution when you use this product, including installation, connection and basic maintenance procedures.

POINTS OF CAUTION

POWER INPUT RATING & OPERATIONAL RANGE

- Locate the power input rating marked on the product and confirm its operational range as indicated below:
24V AC rating: 24V ±10%, 50/60Hz, approx. 100mA
24V DC rating: 24V ±10%, approx. 65mA

GENERAL PRECAUTIONS

- Before you remove the unit or mount it, turn off the power supply and output signal for safety.
- Before you remove the terminal block or mount it, make sure to turn off the power supply and output signal for safety.
- DO NOT set the switches on the module while the power is supplied. The switches are used only for maintenance without the power.

ENVIRONMENT

- Indoor use.
- When heavy dust or metal particles are present in the air, install the unit inside proper housing with sufficient ventilation.
- Do not install the unit where it is subjected to continuous vibration. Do not subject the unit to physical impact.
- Environmental temperature must be within -10 to +55°C (14 to 131°F) with relative humidity within 30 to 90% RH in order to ensure adequate life span and operation.

WIRING


- Do not install cables close to noise sources (relay drive cable, high frequency line, etc.).
- Do not bind these cables together with those in which noises are present. Do not install them in the same duct.
- Be sure to close the terminal cover for safety.

AND


- The unit is designed to function as soon as power is supplied, however, a warm up for 10 minutes is required for satisfying complete performance described in the data sheet.

COMPONENT IDENTIFICATION

FRONT VIEW

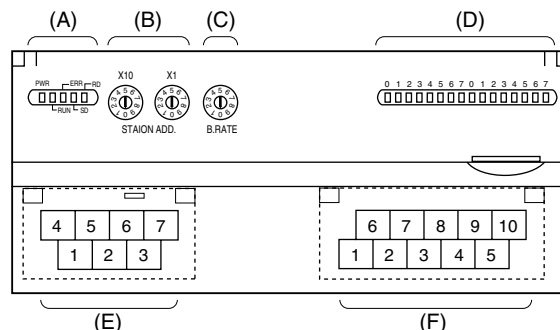

SIDE VIEW

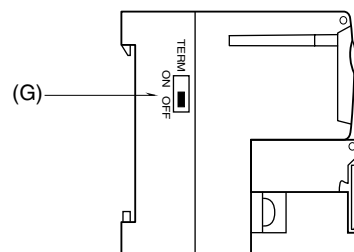

- (A) Status Indicator LED *1
- (B) Station Address Setting Rotary SW
- (C) Baud Rate Setting Rotary SW
- (D) I/O Status Indicator LED
- (E) CC-Link, Power Supply Terminals
- (F) Output Terminals
- (G) Terminating Resistor SW


*1. Refer to 'Status Indicator LED' section for detailed information.

STATUS INDICATOR LED

| ID | COLOR | FUNCTION |
|-----|-------|--|
| PWR | Red | Turns on when the internal 5V is supplied normally. |
| RUN | Red | Turns on when the refresh data is received normally. |
| ERR | Red | Turns on when the received data is abnormal. |
| SD | Red | Turns on when the module is transmitting. |
| RD | Red | Turns on when the module is receiving. |

STATION ADDRESS

Station Address is selected between 1 and 64 in decimal. The left switch determines the tenth place digit, while the right switch does the ones place digit of the address.

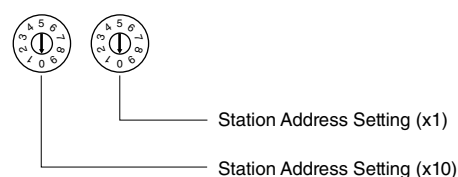

■ BAUD RATE

Baud Rate is selected with the rotary switch.




0 : 156 kbps
1 : 625 kbps
2 : 2.5 Mbps
3 : 5 Mbps
4 : 10 Mbps

Baud Rate Setting

■ TERMINATING RESISTOR


To use the terminating resistor, turn the switch ON, and OFF to invalidate. (Factory setting OFF)

■ POWER SUPPLY, CC-LINK TERMINAL ASSIGNMENT

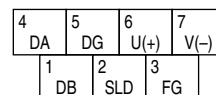

| NO. | ID | FUNCTION, NOTES |
|-----|------|-----------------|
| 1 | DB | White |
| 2 | SLD | Shield |
| 3 | FG | FG |
| 4 | DA | Blue |
| 5 | DG | Yellow |
| 6 | U(+) | Power input |
| 7 | V(-) | Power input |

■ OUTPUT TERMINAL ASSIGNMENT

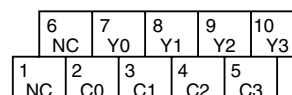

| NO. | ID | FUNCTION | NO. | ID | FUNCTION |
|-----|----|---------------|-----|----|---------------|
| 1 | NC | No connection | 6 | NC | No connection |
| 2 | C0 | Common 0 | 7 | Y0 | Output 0 |
| 3 | C1 | Common 1 | 8 | Y1 | Output 1 |
| 4 | C2 | Common 2 | 9 | Y2 | Output 2 |
| 5 | C3 | Common 3 | 10 | Y3 | Output 3 |

INDICATOR LED

■ STATUS INDICATOR LED

| PWR | RUN | ERR | SD *1 | RD | STATUS *2 |
|-----|-----|-----|-------|--------|--|
| ON | ON | BL | BL | ON | Communicates normally with occasional CRC errors due to noise interference. |
| ON | ON | BL | BL | ON | Communicates normally but the Baud Rate and/or Station Address switches failed. ERR LED blinks approximately in 0.5 seconds intervals. |
| ON | ON | BL | BL | OFF | ---- |
| ON | ON | BL | OFF | ON | CRC error found in the received data. Unable to respond. |
| ON | ON | BL | OFF | OFF | ---- |
| ON | ON | OFF | BL | ON | Normal communication |
| ON | ON | OFF | BL | OFF | ---- |
| ON | ON | OFF | OFF | ON | Unable to receive data addressed to the station. |
| ON | ON | OFF | OFF | OFF | ---- |
| ON | OFF | BL | BL | ON | Performs the interval-timed responses but CRC error found in receiving the refresh data. |
| ON | OFF | BL | BL | OFF | ---- |
| ON | OFF | BL | OFF | ON | CRC error found in the data addressed to the station. |
| ON | OFF | BL | OFF | OFF | ---- |
| ON | OFF | OFF | BL | ON | Link is not started. |
| ON | OFF | OFF | BL | OFF | ---- |
| ON | OFF | OFF | OFF | ON | No data addressed to the station. Or unable to receive data addressed to the station due to noise interference. (Missing parts of the data sent from the master) |
| ON | OFF | OFF | OFF | OFF | Unable to receive data due to wire breakdown |
| ON | OFF | ON | OFF | ON/OFF | Faulty Baud Rate and/or Station Address setting |
| OFF | OFF | OFF | OFF | OFF | Power input removed. Or power supply failure. |

OFF = OFF, ON = ON, BL = Blinking

*1. SD LED may look not blinking but ON with high baud rate and fewer connected modules.

*2. LEDs indicated with "----" in STATUS rarely occurs in normal operation (LED failure or the like as possible cause).

■ I/O STATUS INDICATOR LED

Feedback input status and output bit status are indicated with LED.


ON : LED ON

OFF : LED OFF


TERMINAL CONNECTIONS

Connect the unit as in the diagram below.

EXTERNAL DIMENSIONS unit: mm (inch)

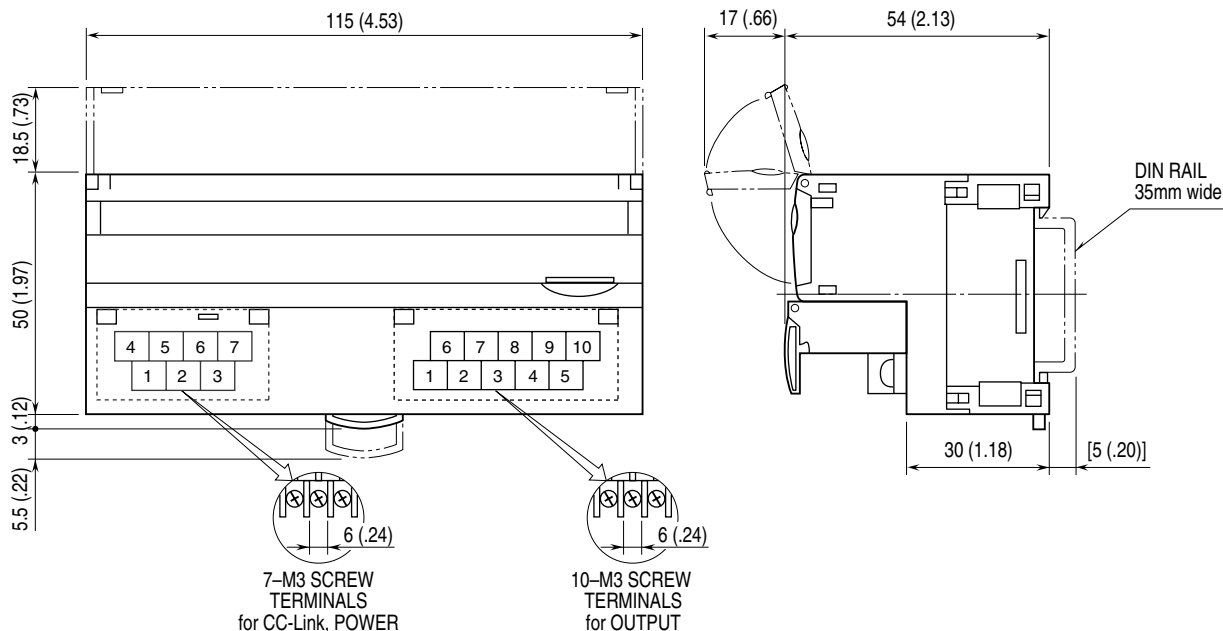


CONNECTION DIAGRAM

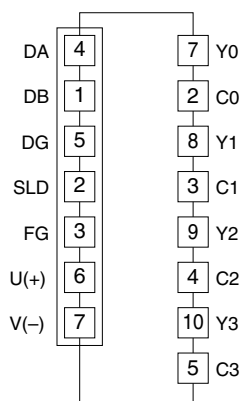


Caution: FG terminal is NOT a protective conductor terminal.

Output Connection Example

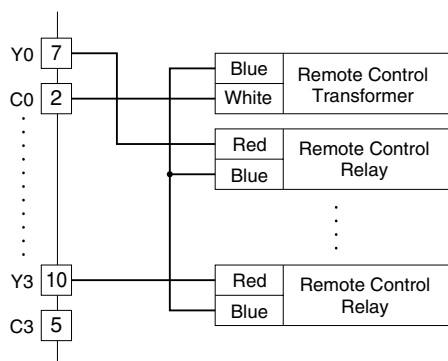

COMMUNICATION CABLE CONNECTIONS

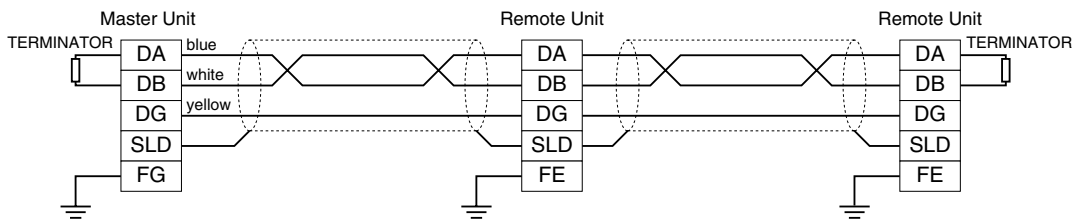

Be sure to connect the terminating resistor across DA and DB at both ends of communication line.
 When this unit is located at an end, turn the terminating resistor SW ON.
 The Master Unit can be located at not only both ends but also any node of the of communication line.


DATA ALLOCATION

■ R7C-RR4

| | Interval-timed Response (X) |
|---------|-----------------------------|
| RX(n+0) | R7C-RR4 |
| RX(n+1) | Unused |

| | Refresh Data (Y) |
|---------|------------------|
| RY(n+0) | R7C-RR4 |
| RY(n+1) | Unused |

I/O DATA DESCRIPTIONS

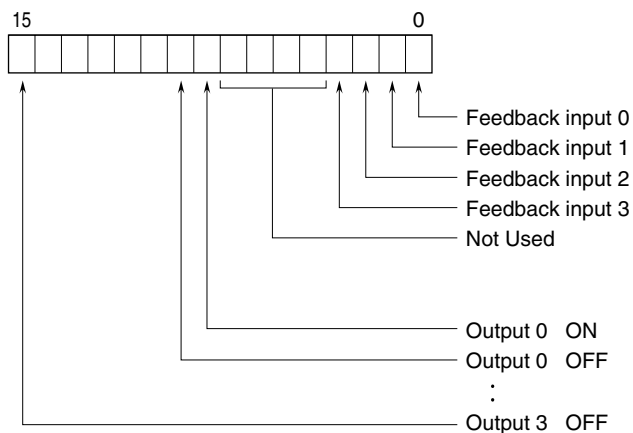

0: OFF 1: ON

OUTPUT SETTING

Each output is set with 2 bits. Refer to the table below for output setting.

| NO. | BIT | SETTING | FUNCTION |
|----------|--------|---------|--------------|
| Output 0 | 8, 9 | 0, 0 | No operation |
| | | 1, 0 | Output 0 ON |
| | | 0, 1 | Output 0 OFF |
| | | 1, 1 | Invalid |
| Output 1 | 10, 11 | 0, 0 | No operation |
| | | 1, 0 | Output 1 ON |
| | | 0, 1 | Output 1 OFF |
| | | 1, 1 | Invalid |
| Output 2 | 12, 13 | 0, 0 | No operation |
| | | 1, 0 | Output 2 ON |
| | | 0, 1 | Output 2 OFF |
| | | 1, 1 | Invalid |
| Output 3 | 14, 15 | 0, 0 | No operation |
| | | 1, 0 | Output 3 ON |
| | | 0, 1 | Output 3 OFF |
| | | 1, 1 | Invalid |

Do not set both bits 1. If the 2 bits are simultaneously 1, the module will not operate normally.

For repeating the output of ON pulse, after setting (0, 0), set (1, 0) once again.

WIRING INSTRUCTIONS

■ SCREW TERMINAL

Torque: 0.5 N·m

■ SOLDERLESS TERMINAL

Refer to the drawing below for recommended ring tongue terminal size. Spade tongue type is also applicable.

Applicable wire size: 0.25 to 1.65 mm² (AWG 22 to 16)

Recommended manufacturer: Japan Solderless Terminal MFG. Co., Ltd, Nichifu Co., Ltd

