

DC CURRENT OUTPUT MODULE
(built-in excitation, 2 points, non-isolated)

MODEL **R8-YS2NJ**

BEFORE USE

Thank you for choosing us. Before use, check the contents of the package you received as below.

If you have any problems or questions with the product, please contact our sales office or representatives.

■ PACKAGE INCLUDES:

DC current output module.....(1)

■ MODEL NO.

Confirm that the model number described on the product is exactly what you ordered.

■ INSTRUCTION MANUAL

This manual describes necessary points of caution when you use this product, including installation, connection and basic maintenance procedures.

POINTS OF CAUTION

■ CONFORMITY WITH EU DIRECTIVES

- The equipment must be mounted inside a panel.
- The actual installation environments such as panel configurations, connected devices and connected wires may affect the protection level of this unit when it is integrated in a panel system. The user may have to review the CE requirements in regard to the whole system and employ additional protective measures to ensure CE conformity.

■ GENERAL PRECAUTIONS

- Before you remove or mount the unit, turn off the power supply and output signal for safety.
- Switches on the side of the module can be set for maintenance only while the power supply is off. Do not access them while the power is supplied.

■ ENVIRONMENT

- Indoor use
- When heavy dust or metal particles are present in the air, install the unit inside proper housing with sufficient ventilation.
- Do not install the unit where it is subjected to continuous vibration. Do not apply physical impact to the unit.
- Environmental temperature must be within -10 to +55°C (14 to 131°F) with relative humidity within 30 to 90% RH in order to ensure adequate life span and operation.

■ WIRING

- Do not install cables close to noise sources (relay drive cable, high frequency line, etc.).
- Do not bind these cables together with those in which noises are present. Do not install them in the same duct.


■ AND

The unit is designed to function as soon as power is supplied, however, a warm up for 10 minutes is required for satisfying complete performance described in the data sheet.


INSTALLATION

■ HOW TO MOUNT THE MODULE ON DIN RAIL


• I/O Module

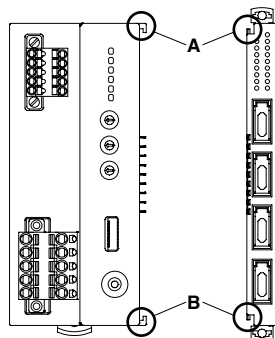


Confirm that the locking clamps of the I/O module are set. Insert the module in parallel to the next one while aligning the grooves of both modules (A & B in the above figure). Maintain it perpendicularly to the rail.

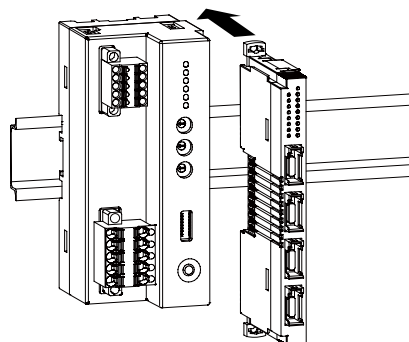


More I/O modules can be added in the same manner.

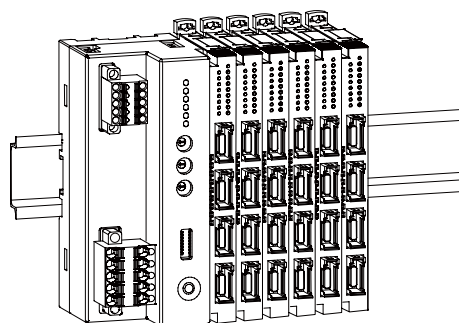


• Protective Cover

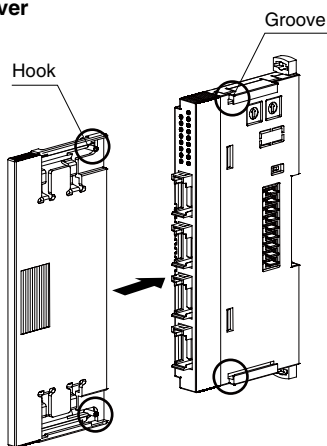

The protective cover is to be attached over the connected I/O module at the right end.
Align the hooks on the cover with the grooves of the module and slide it straight until the hooks are latched.


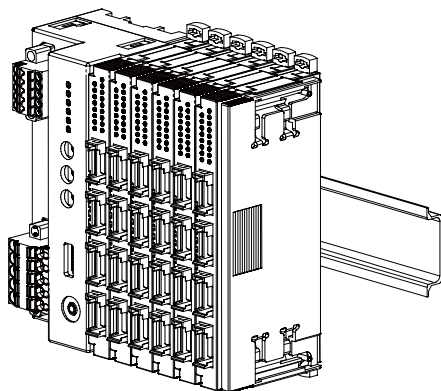


When removing the cover, pull it out while squeezing the hooks inward.


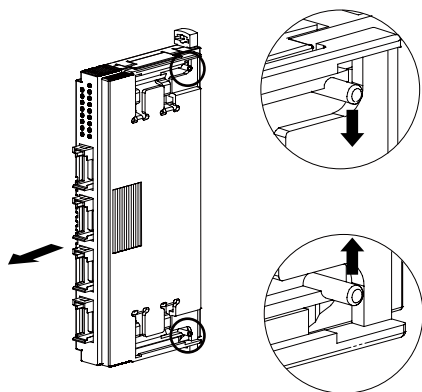


■ HOW TO UNMOUNT THE MODULE ON DIN RAIL

Release the locking clamps and pull out straight the module.

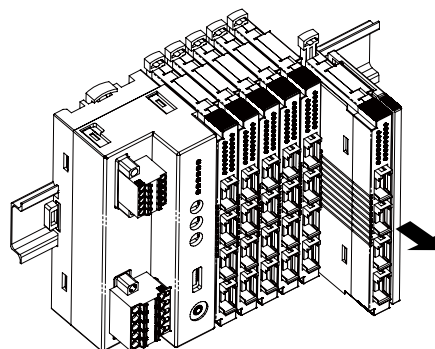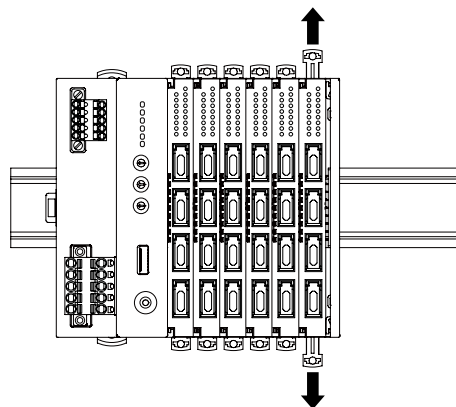

• Removing an intermediate module

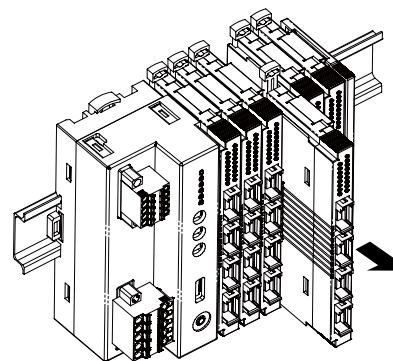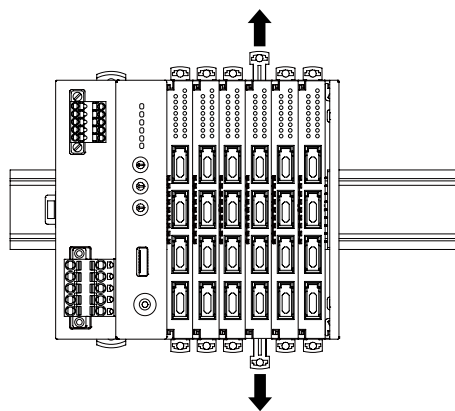

Caution !


- 1) Be careful not to hurt your hand by pointed edges of the internal communication bus connector.
- 2) I/O modules cannot hold tightly on the DIN rail by themselves without power/network module.
Secure them to the position if necessary by using DIN rail end plates.

COMPONENT IDENTIFICATION

■ LEFT SIDE VIEW

■ FRONT VIEW

■ RIGHT SIDE VIEW

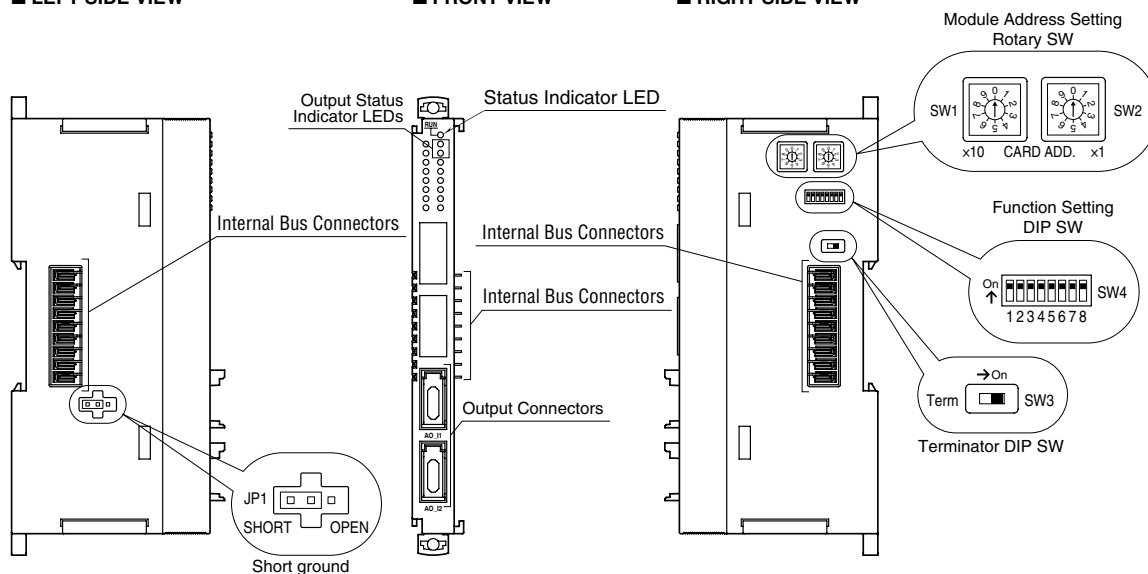

■ INDICATOR LED

LED	OPERATION	FUNCTION
Status	OFF	Stopping
	Green ON	Valid host communication
	Green Blinking	Reading/writing configuration
	Red ON	DIP SW error
Output Status	Red Blinking	Parameter error
	OFF	Output data in the range
	Red Blinking	Output data out of range


■ OUTPUT CONNECTOR ASSIGNMENT

	NO.	ID	FUNCTION
	1	24V	24V DC
	2	AO	Output (+)
	3	AG	Output (-)
	4	0V	0V

■ MODULE ADDRESS

The left switch determines the tenth place digit, while the right switch does the ones place digit of the address.

Address is selected between 0 to 31. (Factory setting: 0)

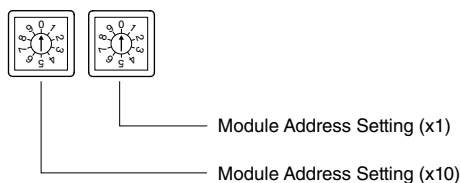

■ SHORT ACROSS GROUNDS

Choose to open or short across grounds of excitation supply and output. In case of shorting across, insert short-plug on center pin of JP1 and SHORT side. In case of opening, insert short-plug on center pin of JP1 and OPEN side.

Factory default is on SHORT side.

■ OPERATING MODE

(*) Factory setting

• Range

Same range for all channels. Use PC Configurator to set independent ranges per channel.

OUTPUT RANGE	SW4
0 – 20 mA DC	1
4 – 20 mA DC (*)	OFF
	ON

• Output at The Loss of Communication

Same output for all channels.

OUTPUT AT THE LOSS OF COMMUNICATION	SW4
Output Hold (*)	7
(last data correctly received is hold)	OFF
Stop output (Output fixed at -5%, 0 mA min.)	ON

• Configuration Mode

CONFIGURATION MODE	SW4
DIP switch setting (*)	8
PC Configurator and communication	OFF
	ON

Note: Be sure to set unused SW4-2 through 4-6 to OFF.

• Terminator DIP SW

TERMINATOR SW	SW3
Without (*)	OFF
With	ON

PC CONFIGURATOR


The following parameters can be set with using PC Configurator Software (model: R8CFG):

- Output setting by channels (range, scaling, zero/gain adjustments, scaling value at power on, scaling value at the loss of communication)
- Common setting (loss of internal bus communication detection time)


Turn SW4-8 ON to allow programming by the PC Configurator via the Power/Network Module.

Refer to the users manual for the R8CFG for detailed operation of the software program.

EXTERNAL DIMENSIONS unit: mm (inch)

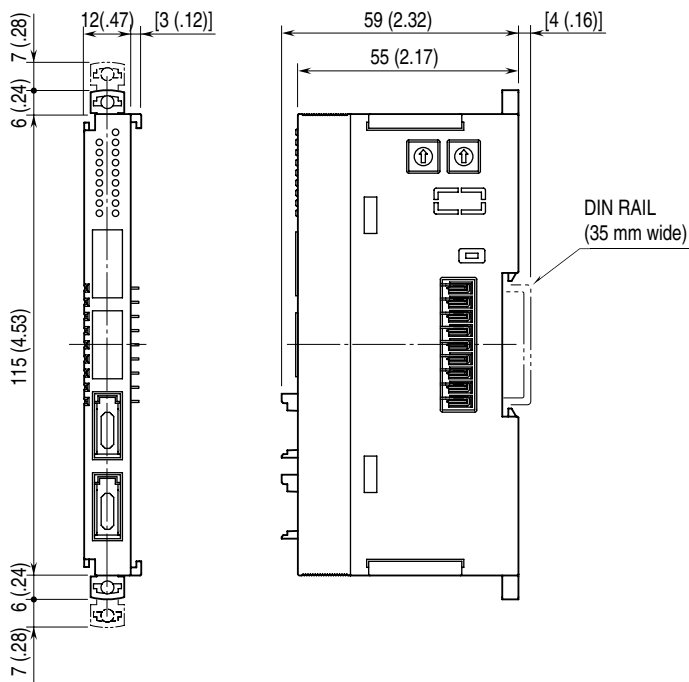

CONNECTION DIAGRAM

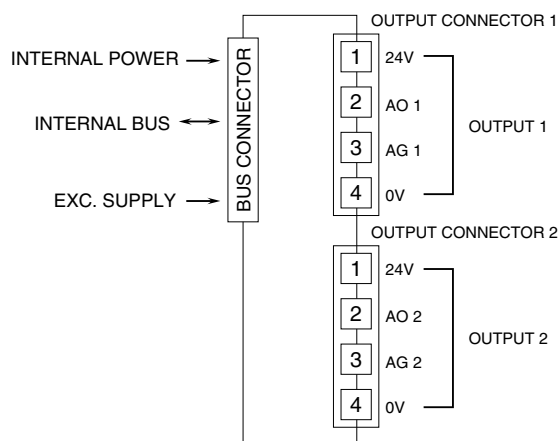

WIRING INSTRUCTIONS

e-CON connector

Unit side connector XN2D-1474-S002 (Omron)
 Recommended cable side connector XN2A-1470 (Omron)*1
 Applicable wire size: 0.08 mm² (AWG28) - 0.5 mm² (AWG20)
 Outer sheath diameter: max. 1.5 dia

*1. The cable connector is not included in the package.
 Refer to the specifications of the product.