

Contents

1. BEFORE USE	2
2. GENERAL DESCRIPTION	2
3. POINTS OF CAUTION.....	3
4. HARDWARE SPECIFICATIONS	4
4.1. 60C-x1 (No. of channels codes 04, 08, or 16 in x)	4
4.2. 60C-x2 (No. of channels codes 04, 08, or 16 in x)	4
5. COMPONENT IDENTIFICATIONS & HARDWARE ADJUSTMENTS.....	5
6. INSTALLATION	5
7. TERMINAL CONNECTIONS.....	6
8. CONNECTING DATA LINK WIRES.....	7
8.1. TWISTED-PAIR CABLE	7
8.2. POINTS OF CAUTION IN HANDLING WIRES	7
8.3. WIRING DIAGRAM	7
9. WIRING & CONNECTIONS.....	8
9.1. POINTS OF CAUTION IN CONNECTING WIRES.....	8
9.2. CONNECTOR PIN ASSIGNMENTS	8
9.3. CABLE (MODEL: MCN34) PIN ASSIGNMENTS	9
10. I/O SIGNALS	10
10.1. REMOTE I/O	10
10.2. ASSIGNING REMOTE REGISTERS	10
10.3. A/D CONVERSION	11
11. PARAMETERS SETTING BY PLC PROGRAM	12
11.1. GENERAL DESCRIPTION	12
12. TROUBLESHOOTING.....	13
12.1. L ERR. INDICATOR BLINKING	13
12.2. L ERR. INDICATOR ON	13
12.3. L RUN INDICATOR OFF	13
12.4. UNABLE TO READ/WRITE DIGITAL VALUES?	13
13. LIGHTNING SURGE PROTECTION	13

1. BEFORE USE

Thank you for choosing us. Before use, please check contents of the package you received as outlined below. If you have any problems or questions with the product, please contact our sales office or representatives.

■ PACKAGE INCLUDES:

Analog I/O module (body + base socket) (1)
Terminating resistor (110 Ω, 0.5 W)..... (1)

■ MODEL NO.


Confirm Model No. marking on the product to be exactly what you ordered.

■ INSTRUCTION MANUAL

This manual describes necessary points of caution when you use this product, including installation, connection and basic maintenance procedures.

2. GENERAL DESCRIPTION

The model 60C, Analog I/O Module, is used as remote device for CC-Link.
Model number and suffix codes are designated as follows:

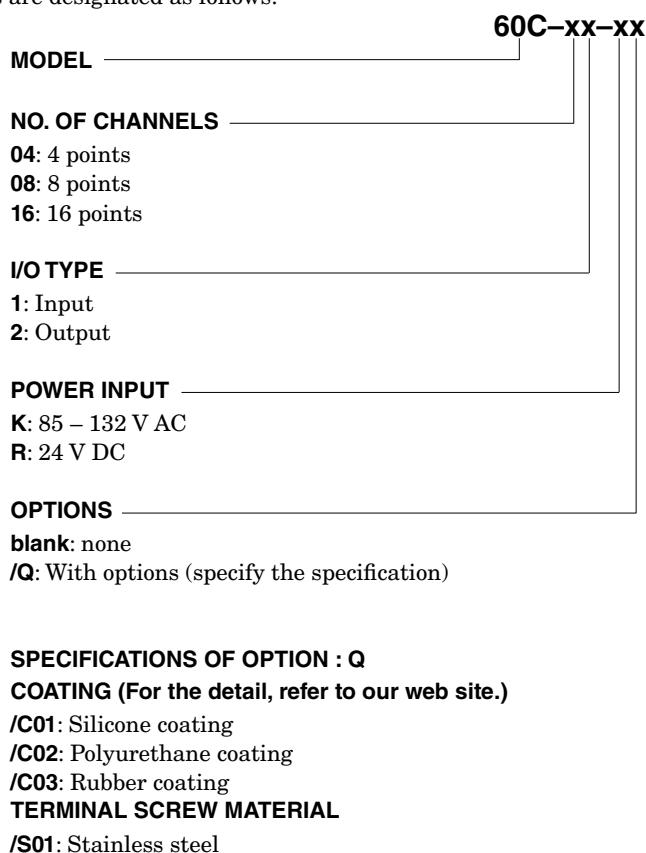

Various inputs and outputs are available by employing 10-RACK series, 18-RACK series or other signal conditioners. The 60C input module converts analog inputs (0 – 100%) proportionally into 16-bit signed binary signals. The one for output converts 16-bit signed binary signals proportionally into analog outputs (0 – 100%).

This instruction manual explains hardware specifications, component identification, and wiring instructions, etc.

3. POINTS OF CAUTION

■ POWER INPUT RATING & OPERATIONAL RANGE

- Locate the power input rating marked on the product and confirm its operational range as indicated below:
85 – 132V AC rating: 85 – 132V, 47 – 66 Hz, approx. 4VA
24V DC rating: 24V \pm 10%, approx. 4W

■ GENERAL PRECAUTIONS

- Before you remove the unit from its base socket or mount it, turn off the power supply, input signal and output signal for safety.

■ ENVIRONMENT

- Indoor use.
- When heavy dust or metal particles are present in the air, install the unit inside proper housing with sufficient ventilation.
- Do not install the unit where it is subjected to continuous vibration. Do not subject the unit to physical impact.
- Environmental temperature must be within -5 to +55°C (23 to 131°F) with relative humidity within 30 to 90% RH in order to ensure adequate life span and operation.

■ WIRING

- Do not install cables close to noise sources (relay drive cable, high frequency line, etc.).
- Do not bind these cables together with those in which noises are present. Do not install them in the same duct.

■ AND

- The unit is designed to function as soon as power is supplied, however, a warm up for 10 minutes is required for satisfying complete performance described in the data sheet.

4. HARDWARE SPECIFICATIONS


4.1. 60C-x1 (No. of channels codes 04, 08, or 16 in x)

ITEM	SPECIFICATIONS	
Analog input	1 – 5 V DC (input resistance $\geq 1 \text{ M}\Omega$)	
Protocol	CC-Link, Ver.1.10	
Digital output	16-bit signed binary (14 bits for data)	
I/O characteristics	0 – 10000 proportional to analog input 0 – 100%	
Maximum resolution	1 mV for 1 – 5 V DC range	
Accuracy	$\pm 0.1\%$	
No. of analog input channels	60C-041	4
	60C-081	8
	60C-161	16
Isolation	Input to CC-Link [FG] to power	
Required nodes	60C-041	1 (RX/RV 32 points each, RW _r /RW _w each 4 points)
	60C-081	2 (RX/RV 32 points each, RW _r /RW _w each 8 points)
	60C-161	4 (RX/RV 32 points each, RW _r /RW _w each 16 points)
Connection	CC-Link	Euro type connector terminal (applicable wire size: 0.2 – 2.5 mm ² , stripped length 7 mm)
	Input	34-pin connector (OMRON XG4A-3434)
	Power input	M3.5 screw terminals (torque 0.8 N·m)
Noise immunity	500 V p-p, 1 μ sec.	
Dielectric strength	1500 V AC @ 1 minute (input to CC-Link [FG] to power)	
	2000 V AC @ 1 minute (input to CC-Link [FG] or power to ground [FG1])	
Insulation resistance	$\geq 100 \text{ M}\Omega$ with 500 V DC (input to CC-Link [FG] to power to ground [FG1])	
Weight	450 g (0.99 lb)	
Power input	60C-x1-K	85 – 132 V AC, 47 – 66 Hz
	60C-x1-R	24 V DC $\pm 10\%$
Power consumption	60C-x1-K	approx. 4 VA
Current consumption	60D-x1-R	approx. 160 mA

4.2. 60C-x2 (No. of channels codes 04, 08, or 16 in x)

ITEM	SPECIFICATIONS	
Analog output	1 – 5 V DC (load resistance $\geq 20 \text{ k}\Omega$)	
Protocol	CC-Link, Ver.1.10	
Digital input	16-bit signed binary (14 bits for data)	
I/O characteristics	0 – 10000 proportional to analog output 0 – 100%	
Maximum resolution	1 mV for 1 – 5 V DC range	
Accuracy	$\pm 0.1\%$ excluding the accuracy of I/O modules	
No. of analog output channels	60C-042	4
	60C-082	8
	60C-162	16
Isolation	Output to CC-Link [FG] to power	
Required nodes	60C-042	1 (RX/RV 32 points each, RW _r /RW _w each 4 points)
	60C-082	2 (RX/RV 32 points each, RW _r /RW _w each 8 points)
	60C-162	4 (RX/RV 32 points each, RW _r /RW _w each 16 points)
Connection	CC-Link	Euro type connector terminal (applicable wire size: 0.2 – 2.5 mm ² , stripped length 7 mm)
	Output	34-pin connector (OMRON XG4A-3434)
	Power input	M3.5 screw terminals (torque 0.8 N·m)
Noise immunity	500 V p-p, 1 μ sec.	
Dielectric strength	1500 V AC @ 1 minute (output to CC-Link [FG] to power)	
	2000 V AC @ 1 minute (output to CC-Link [FG] or power to ground [FG1])	
Insulation resistance	$\geq 100 \text{ M}\Omega$ with 500 V DC (output to CC-Link [FG] to power to ground [FG1])	
Weight	450 g (0.99 lb)	
Power input	60C-x2-K	85 – 132 V AC, 47 – 66 Hz
	60C-x2-R	24 V DC $\pm 10\%$
Power consumption	60C-x2-K	approx. 4 VA
Current consumption	60C-x2-R	approx. 160 mA

5. COMPONENT IDENTIFICATIONS & HARDWARE ADJUSTMENTS

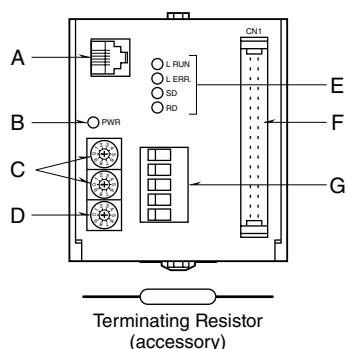

NAME	FUNCTIONS		
A	Modular jack for factory calibration	Used only for factory calibration.	
B	Power LED PWR (green)	MARKING (color)	
		FUNCTIONS ON: Power is supplied. OFF: Power is not supplied.	
C	Station No. Setting	Selectable within 1 – 64. (factory set to: 00)	
D	Baud rate Setting	SETTING	
		BAUD RATE	
		0	156 kbps (factory default)
		1	625 kbps
		2	2.5 Mbps
		3	5 Mbps
4	10 Mbps		
Other than 0 – 4	Not valid; L ERR. turns on as a transmission error.		
E	Status indicator LED	MARKING (color)	
		FUNCTIONS	
		L RUN (red)	ON: normal communication OFF: communication down (time-out error)
		L ERR. (red)	ON: transmission data error Blinking : transmission data error OFF: normal transmission
		SD (red)	ON when transmitting
RD (red)	ON when receiving		
F	I/O connector	For input and output signals	
G	Euro type connector terminal for CC-Link	For wiring to CC-Link	

6. INSTALLATION


Detach the yellow clamps located at the top and bottom of the unit for separating the body from the base socket.

■ DIN RAIL MOUNTING

Set the base socket so that its DIN rail adaptor is at the bottom. Position the upper hook at the rear side of base socket on the DIN rail and push in the lower. When removing the socket, push down the DIN rail adaptor utilizing a minus screwdriver and pull.

■ WALL MOUNTING

Refer to “EXTERNAL DIMENSIONS.”

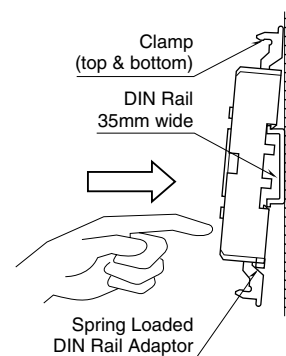


Shape and size of the base socket are slightly different with various socket types.

7. TERMINAL CONNECTIONS


Connect the unit as in the diagram below or refer to the connection diagram on the side of the unit.

EXTERNAL DIMENSIONS unit: mm (inch)

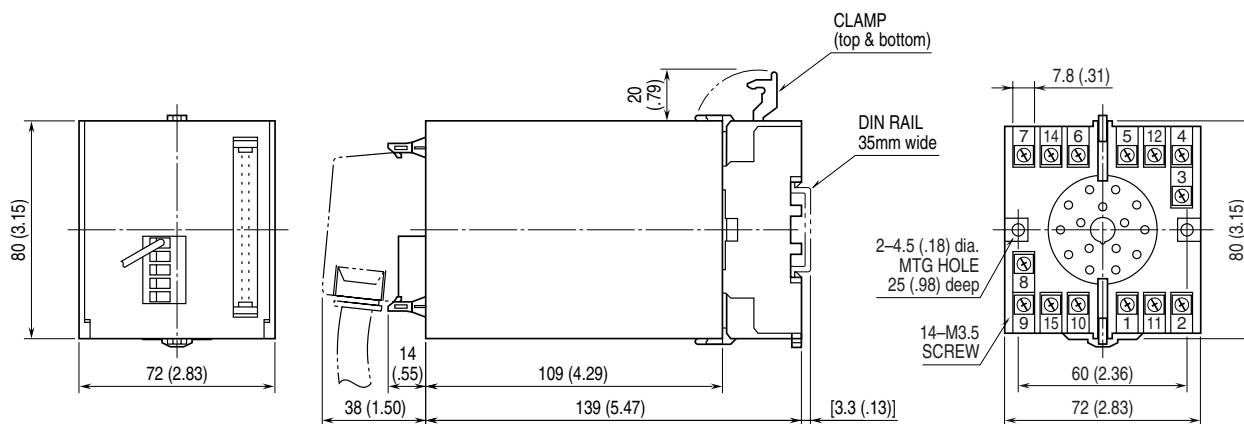

•When mounting, no extra space is needed between units.

CONNECTION DIAGRAM

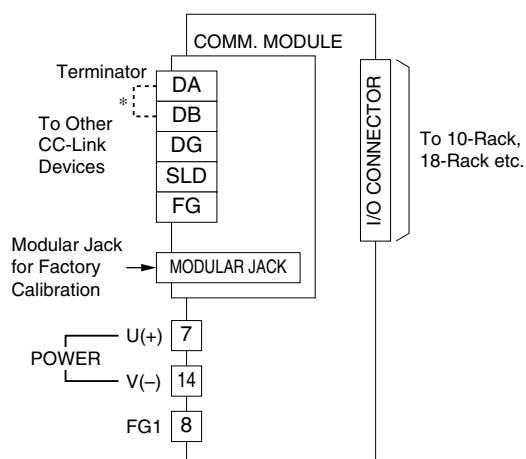

* Attach the terminating resistor when the module is at the termination of a transmission line.


8. CONNECTING DATA LINK WIRES

The following explanations apply to the wires connecting the 60C to the Master Unit.

8.1. TWISTED-PAIR CABLE

The following types of wire are recommended for connecting the 60C to the Master Unit.

KURAMO ELECTRIC FANC-SB 0.5 mm² × 3 or equivalent

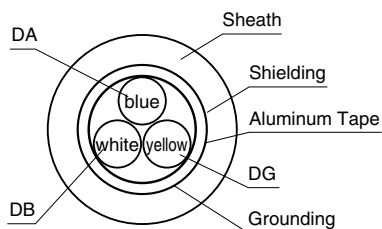


8.2. POINTS OF CAUTION IN HANDLING WIRES

DO NOT apply extraordinary forces to the wires as explained in the following:

- 1) DO NOT SQUEEZE the wires with a sharp-edged tool.
- 2) DO NOT TWIST the wires extraordinarily.
- 3) DO NOT PULL the wires extraordinarily tight.
- 4) DO NOT TRAMPLE on the wires.
- 5) DO NOT PUT objects onto the wires.
- 6) DO NOT DAMAGE the insulation tube of wires.

8.3. WIRING DIAGRAM

Connect the 60C to the Master Unit as shown below.

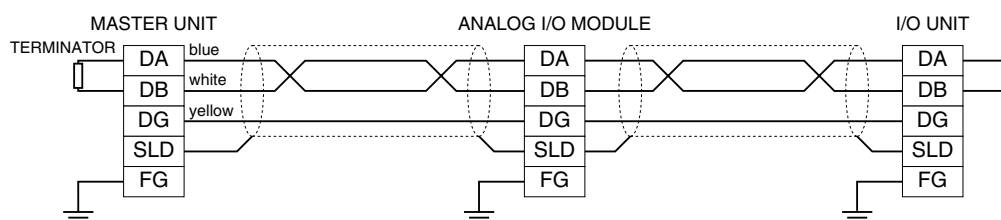

9. WIRING & CONNECTIONS

9.1. POINTS OF CAUTION IN CONNECTING WIRES

Appropriate precautions are required such as follows for protecting the system from external noise interference:

- 1) Separate analog I/O and communication wires from others in order to prevent surge or induction noises.
- 2) Separate power input wires (AC) from those for driving motors.
- 3) Do not install these wires next to main supply circuits or high voltage cables.
Never bind them to these circuits.
- 4) Ground the shield of communication wires at one point.
Consideration about locations of the ground may be necessary according to external noise interference.

9.2. CONNECTOR PIN ASSIGNMENTS

■ INPUT CONNECTOR FOR 60C-x1

PIN NO.	ASSIGNMENT	PIN NO.	ASSIGNMENT
1	Input 1	2	COM
3	Input 2	4	COM
5	Input 3	6	COM
7	Input 4	8	COM
9	Input 5	10	COM
11	Input 6	12	COM
13	Input 7	14	COM
15	Input 8	16	COM
17	Input 9	18	COM
19	Input 10	20	COM
21	Input 11	22	COM
23	Input 12	24	COM
25	Input 13	26	COM
27	Input 14	28	COM
29	Input 15	30	COM
31	Input 16	32	COM
33	No connection	34	No connection


Input 1 – 4 for 4 points, 1 – 8 for 8 points.

■ OUTPUT CONNECTOR FOR 60C-x2

PIN NO.	ASSIGNMENT	PIN NO.	ASSIGNMENT
1	Output 1	2	COM
3	Output 2	4	COM
5	Output 3	6	COM
7	Output 4	8	COM
9	Output 5	10	COM
11	Output 6	12	COM
13	Output 7	14	COM
15	Output 8	16	COM
17	Output 9	18	COM
19	Output 10	20	COM
21	Output 11	22	COM
23	Output 12	24	COM
25	Output 13	26	COM
27	Output 14	28	COM
29	Output 15	30	COM
31	Output 16	32	COM
33	No connection	34	No connection


Output 1 – 4 for 4 points, 1 – 8 for 8 points.

9.3. CABLE (MODEL: MCN34) PIN ASSIGNMENTS

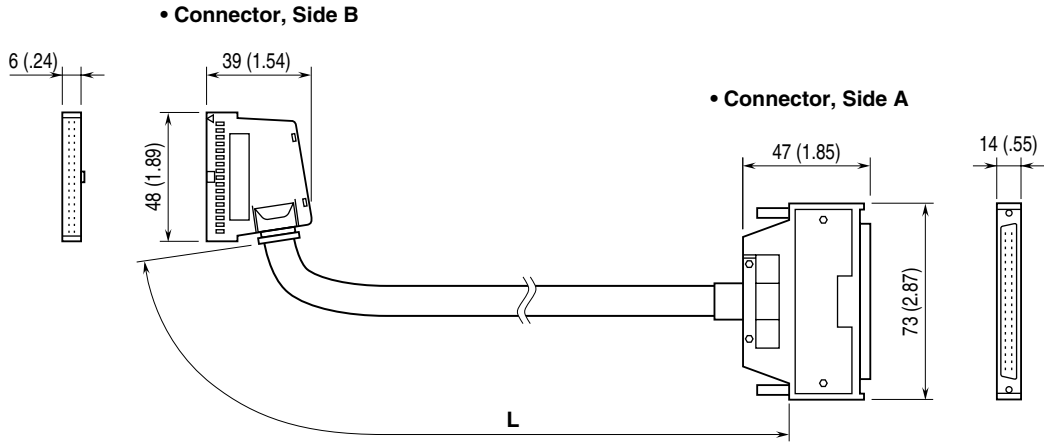


	MCN34-03	MCN34-05	MCN34-10	MCN34-30
L	30 cm (11.8 in.)	50 cm (19.7 in.)	1 m (3.3 ft.)	3 m (9.8 ft.)

■ CONNECTOR PIN ASSIGNMENT

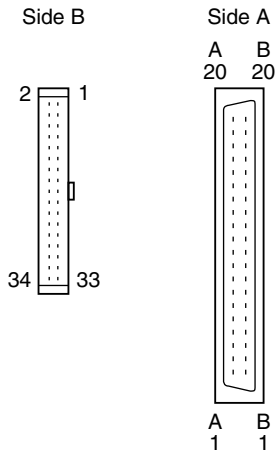

■ WIRING DIAGRAM

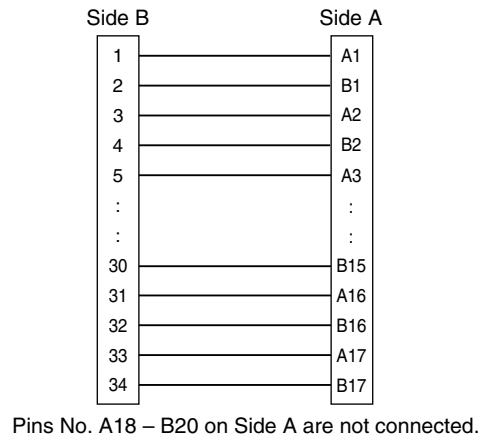

10. I/O SIGNALS

10.1. REMOTE I/O

The 60C occupies from 1 up to 4 nodes according to the number of I/O channels. Regardless of the number of nodes, 32 bits are assigned to each of input and output for sending to/receiving from the Master Unit. One (1) bit among RXxB* is used as remote device (60C) READY signal, turned ON when the 60C is in normal operation.

*. $x = (\text{Station No.} \times 2 - 1) \text{H}$

[example] Station No. = 9

$9 \times 2 - 1 = 17 \times 11\text{H}$

READY signal is input at RX11B.

10.2. ASSIGNING REMOTE REGISTERS

1) 60C-x1

The 60C-x1 does not use the remote registers for the direction from the Master to Remote (RWwn to RWwn+15). The table below shows the data assignment of those for the direction from the Remote to Master.

DIRECTION	ADDRESS	CONTENTS	60C-041	60C-081	60C-161	DEFAULT
60C ↓ Master	RWrn + 0	Ch. 1 digital output	✓	✓	✓	0
	RWrn + 1	Ch. 2 digital output	✓	✓	✓	0
	RWrn + 2	Ch. 3 digital output	✓	✓	✓	0
	RWrn + 3	Ch. 4 digital output	✓	✓	✓	0
	RWrn + 4	Ch. 5 digital output		✓	✓	0
	RWrn + 5	Ch. 6 digital output		✓	✓	0
	RWrn + 6	Ch. 7 digital output		✓	✓	0
	RWrn + 7	Ch. 8 digital output		✓	✓	0
	RWrn + 8	Ch. 9 digital output			✓	0
	RWrn + 9	Ch. 10 digital output			✓	0
	RWrn + 10	Ch. 11 digital output			✓	0
	RWrn + 11	Ch. 12 digital output			✓	0
	RWrn + 12	Ch. 13 digital output			✓	0
	RWrn + 13	Ch. 14 digital output			✓	0
	RWrn + 14	Ch. 15 digital output			✓	0
	RWrn + 15	Ch. 16 digital output			✓	0

2) 60C-x2


The 60C-x2 does not use the remote registers for the direction from the Remote to Master (RWrn to RWrn+15). The table below shows the data assignment of those for the direction from the Master to Remote.

DIRECTION	ADDRESS	CONTENTS	60C-042	60C-082	60C-162	DEFAULT
Master ↓ 60C	RWwn + 0	Ch. 1 digital input	✓	✓	✓	0
	RWwn + 1	Ch. 2 digital input	✓	✓	✓	0
	RWwn + 2	Ch. 3 digital input	✓	✓	✓	0
	RWwn + 3	Ch. 4 digital input	✓	✓	✓	0
	RWwn + 4	Ch. 5 digital input		✓	✓	0
	RWwn + 5	Ch. 6 digital input		✓	✓	0
	RWwn + 6	Ch. 7 digital input		✓	✓	0
	RWwn + 7	Ch. 8 digital input		✓	✓	0
	RWwn + 8	Ch. 9 digital input			✓	0
	RWwn + 9	Ch. 10 digital input			✓	0
	RWwn + 10	Ch. 11 digital input			✓	0
	RWwn + 11	Ch. 12 digital input			✓	0
	RWwn + 12	Ch. 13 digital input			✓	0
	RWwn + 13	Ch. 14 digital input			✓	0
	RWwn + 14	Ch. 15 digital input			✓	0
	RWwn + 15	Ch. 16 digital input			✓	0

10.3. A/D CONVERSION


1) 60C-x1

Analog input signal (0 – 100%) from signal conditioners is converted proportionally into digital data, provided to the Master Unit.

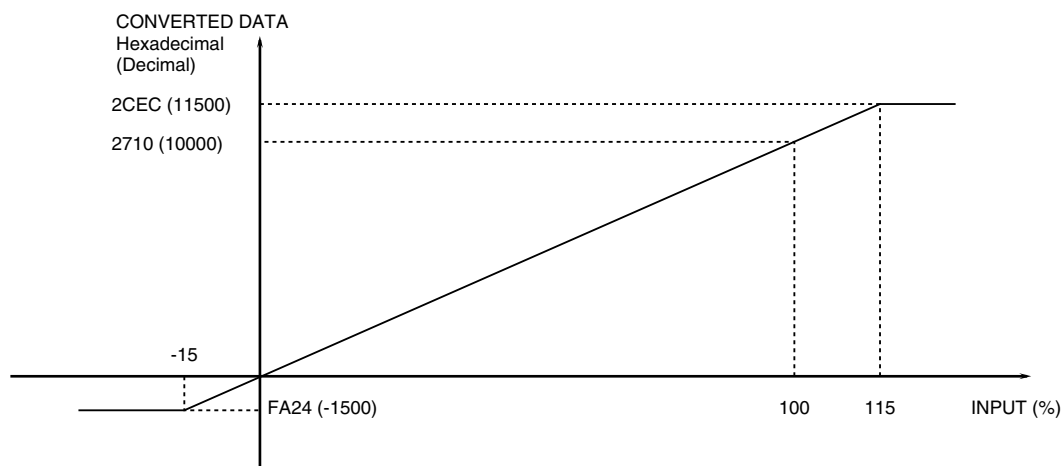

2) 60C-x2

Digital input signal from the Master Unit is converted proportionally into analog output signal (0 – 100%).

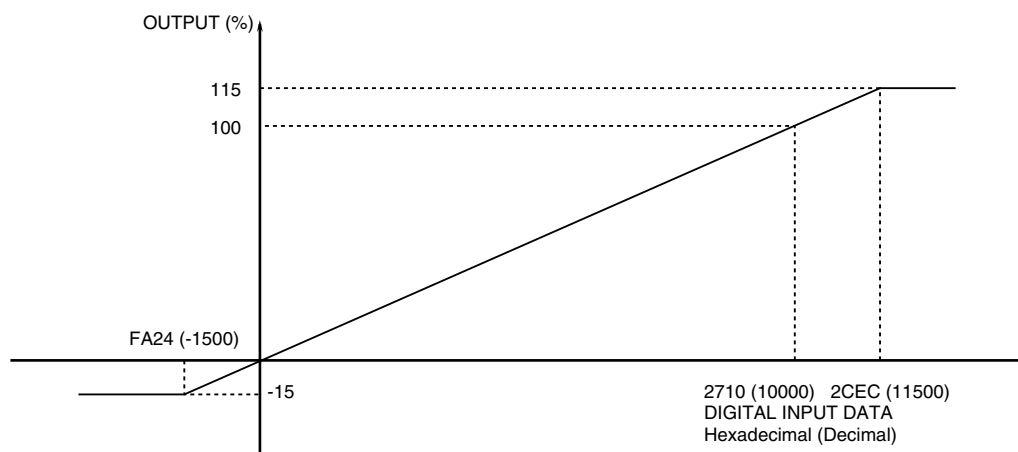

3) OUTPUT IN AN ABNORMALITY


When an abnormality such like CPU error, STOP, time-out occurs at the PLC, the output signal of the 60C is maintained as HOLD (no clearing output signal, keeping the value just before the abnormality).

When the PLC recovers to normal operation and the 60C receives new data, the output restarts changing.

11. PARAMETERS SETTING BY PLC PROGRAM

11.1.GENERAL DESCRIPTION

The ladder diagram below shows a program example assuming that the master station's first I/O number is X/Y20 to 3F. For detailed information, refer to users manuals for the PLC CPU and the Master Unit.

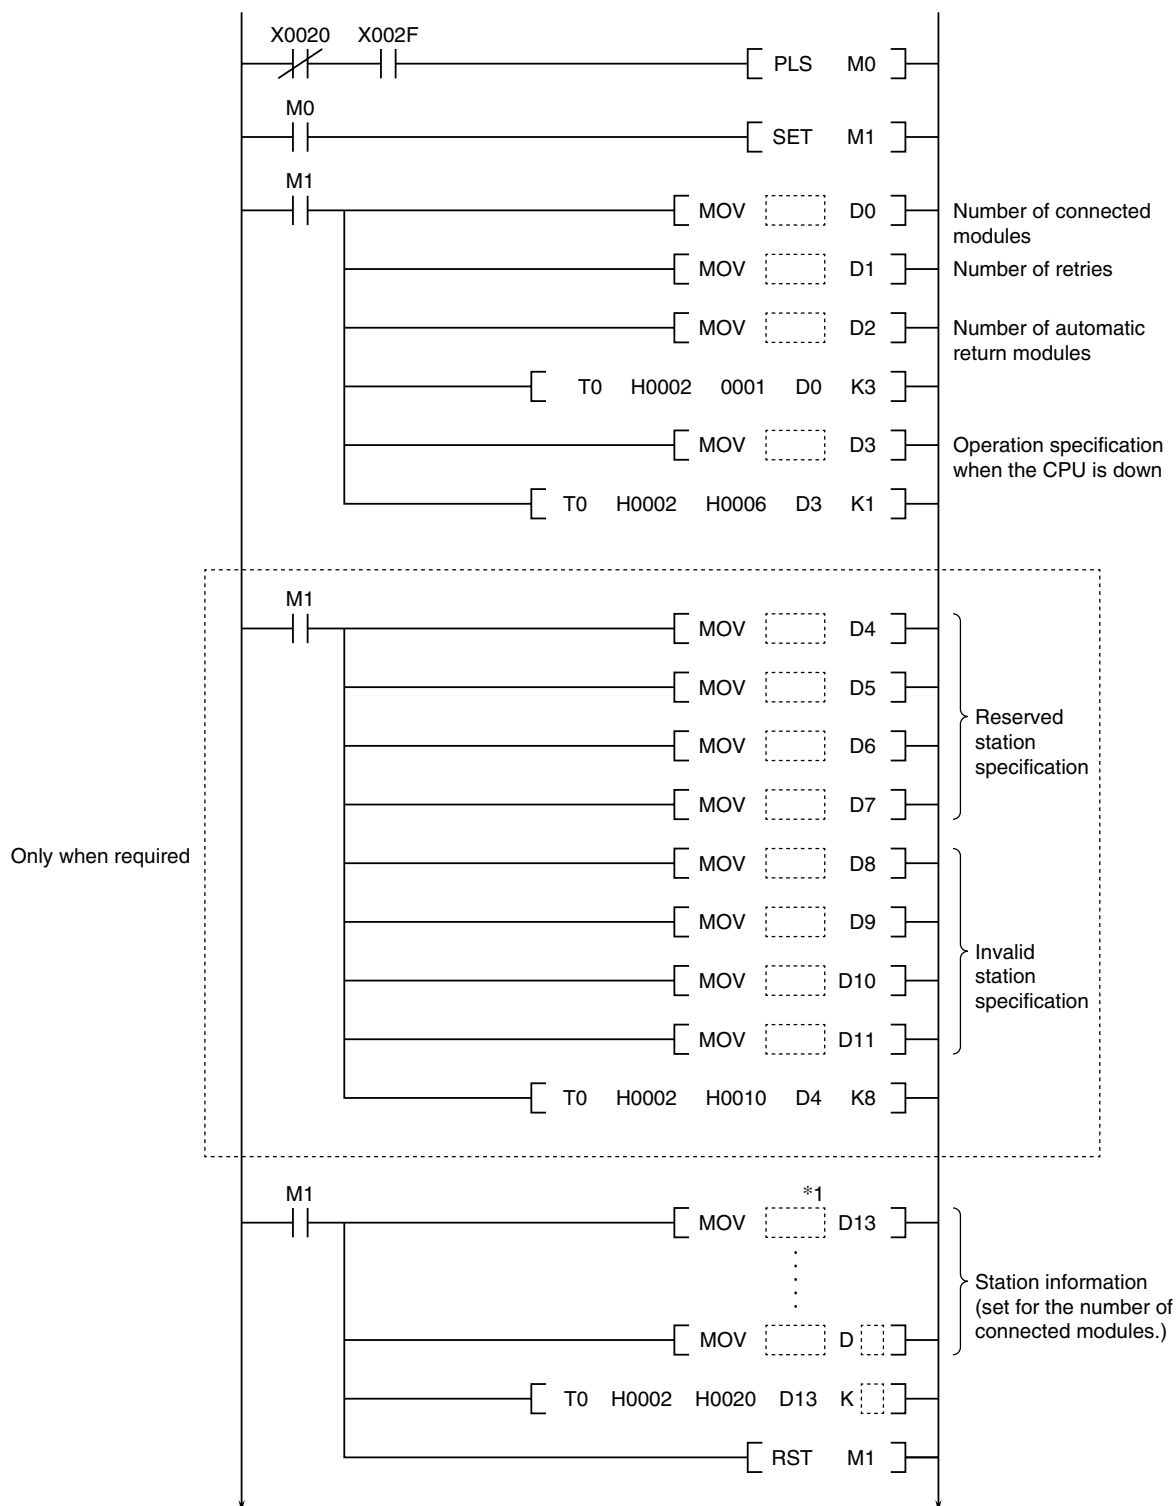

12. TROUBLESHOOTING

Basic troubleshooting methods are explained in this section.

For problems concerning the PLC CPU and Master Unit, consult users manuals for these units.

12.1. L ERR. INDICATOR BLINKING

CHECK	TROUBLESHOOTING
Have you changed the station No. and/or baud rate settings during normal operation?	Return these settings to the state when the unit operated normally.

12.2. L ERR. INDICATOR ON

CHECK	TROUBLESHOOTING
Are the station No. and/or baud rate settings correct?	Set them correctly.

12.3. L RUN INDICATOR OFF

Consult the users manual for the Master Unit.

12.4. UNABLE TO READ/WRITE DIGITAL VALUES?

CHECK	TROUBLESHOOTING
Is the L RUN indicator OFF?	Refer to Section "12.3. L RUN INDICATOR OFF".
Is the L ERR. indicator blinking or ON?	Consult the users manual for the Master Unit.
Is the RUN indicator on the PLC CPU blinking or OFF?	Consult the users manual for the CPU.
Is the RUN indicator on the Master Unit OFF?	Consult the users manual for the Master Unit.
Are the RD/SD indicators on the Master Unit ON?	Consult the users manual for the Master Unit.
Are the wires for analog I/O properly connected to respective terminals? No wire breakdown?	Check these wires visually or check conductivity for each pair of wires.
[60C-x1] Remove analog input wires and apply test voltage to the terminals (e.g. Use a dry cell). Try to read out digital value.	If the digital value is read out normally, there are possibilities of noise interference via external wires. Check wiring and grounding.
[60C-x2] Remove analog output wires and connect a tester to the terminals. Try to read out digital value.	If the digital value is read out normally, there are possibilities of noise interference via external wires. Check wiring and grounding.

13. LIGHTNING SURGE PROTECTION

We offer a series of lightning surge protectors for protection against induced lightning surges. Please contact us to choose appropriate models.