

## HUB MODULE ( CUnet )

MODEL

**JC-CU**

### BEFORE USE ....

Thank you for choosing us. Before use, please check contents of the package you received as outlined below.

If you have any problems or questions with the product, please contact our sales office or representatives.

This product is for use in general industrial environments, therefore may not be suitable for applications which require higher level of safety (e.g. safety or accident prevention systems) or of reliability (e.g. vehicle control or combustion control systems).

For safety, installation and maintenance of this product must be conducted by qualified personnel.

#### ■ PACKAGE INCLUDES:

Hub module .....(1)  
DIN rail mounter slider .....(1)

#### ■ MODEL NO.

Confirm that the model number described on the product is exactly what you ordered.

#### ■ INSTRUCTION MANUAL

This manual describes necessary points of caution when you use this product, including installation, connection and basic maintenance procedures.

### POINTS OF CAUTION

#### ■ CONFORMITY WITH EU DIRECTIVES

- The equipment must be mounted inside a panel.
- Use dual-shield cables (Shinko Seisen Industry Model ZHY262PBA) for the network. If it is not sufficient, use a ferrite core (TDK Model ZCAT3035-1330 or equivalent) for the network cable.
- Expose the shield at a part of the cable cover, clip it with a Loop clamp (Seiwa Electric Mfg. Model E08P03 or equivalent), and ground it to the internal panel of the control panel.
- The actual installation environments such as panel configurations, connected devices and connected wires may affect the protection level of this module when it is integrated in a panel system. The user may have to review the CE requirements in regard to the whole system and employ additional protective measures\* to ensure CE conformity.

\* For example, installation of noise filters and clamp filters for the power source, input and output connected to the unit, etc.

#### ■ POWER INPUT RATING & OPERATIONAL RANGE

Locate the power input rating marked on the product and confirm its operational range as indicated below:

24V DC rating: 24V  $\pm$ 10%

16–32V DC rating: 15–33V DC

Power consumption:

JC-CU-3: approx. 0.9 W, JC-CU-7: approx. 1.2 W

#### ■ GENERAL PRECAUTIONS

Before you remove the module or mount it, turn off the power supply for safety.

#### ■ ENVIRONMENT

- Indoor use
- When heavy dust or metal particles are present in the air, install the module inside proper housing with sufficient ventilation.
- Do not install the module where it is subjected to continuous vibration. Do not subject the module to physical impact.
- Environmental temperature must be within -10 to +55°C (14 to 131°F) with relative humidity within 10 to 90% RH in order to ensure adequate life span and operation.

#### ■ WIRING

- Do not install cables close to noise sources (relay drive cable, high frequency line, etc.).
- Do not bind these cables together with those in which noises are present. Do not install them in the same duct.


#### ■ AND ....

The module is designed to function as soon as power is supplied, however, a warm up for 10 minutes is required for satisfying complete performance described in the data sheet.


## COMPONENT IDENTIFICATION

### ■ I/O TYPE : 3 3port

#### • SIDE VIEW

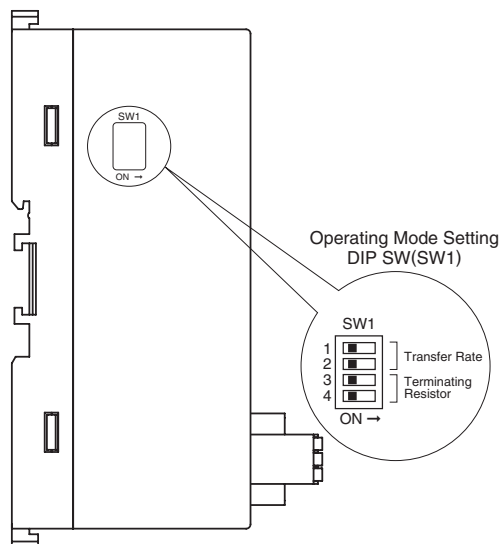


#### • FRONT VIEW

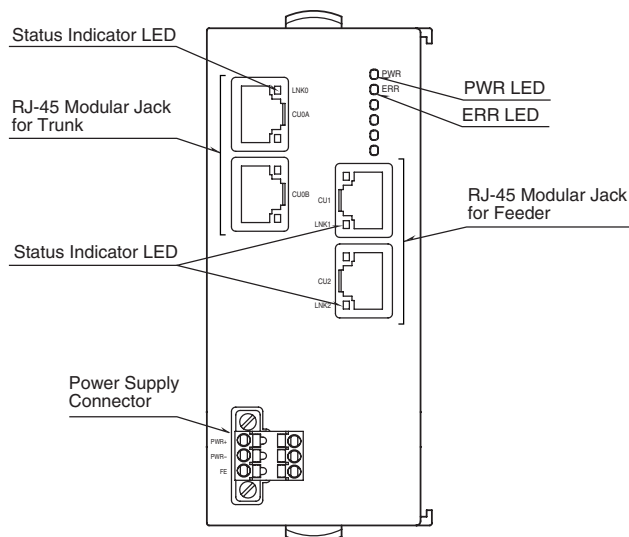


### ■ I/O TYPE : 7 7port

#### • SIDE VIEW

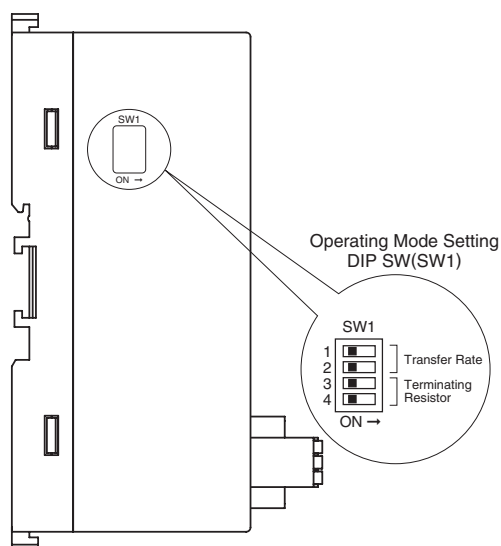

#### • FRONT VIEW

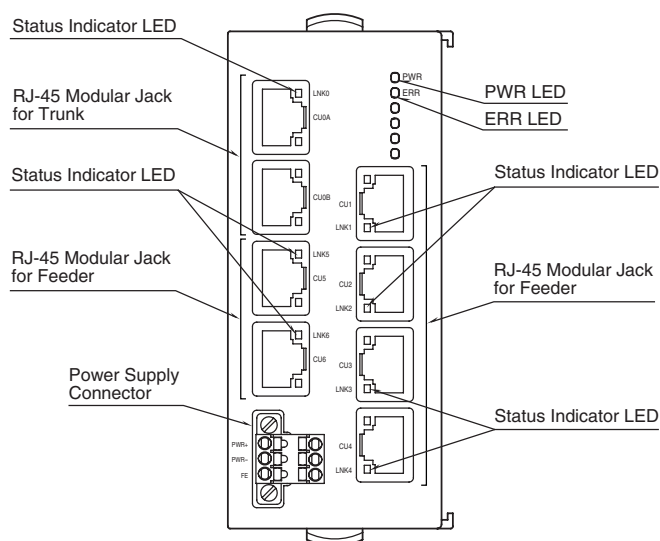

### ■ STATUS INDICATOR LED

ID	COLOR	FUNCTION
PWR	Green	ON when internal power supply is supplied normally
ERR	Red	ON when receiving error packet at least one communication port
LNK 0-6	Green	ON at normal communication

### ■ TERMINATING RESISTOR (SW1-3, 1-4)

SW1-1	SW1-2	TERMINATING RESISTOR
OFF	OFF	Disable(*)
ON	ON	Enable

(\*) Factory setting

### ■ OPERATING MODE

#### • Transfer rate (SW1-1, 1-2)

SW1-1	SW1-2	TRANSFER RATE
OFF	OFF	12Mbps (*)
ON	OFF	6Mbps
OFF	ON	3Mbps

## WIRING INSTRUCTIONS

### ■ POWER SUPPLY


**Cable connector:** TFMC1,5 / 3–STF–3,5

(Phoenix Contact) (included in the package)

**Applicable wire size:** 0.2 – 1.5 mm<sup>2</sup>; stripped length 10 mm

**Recommended solderless terminal**


- AI0,25–10YE 0.25 mm<sup>2</sup> (Phoenix Contact)
- AI0,34–10TQ 0.34 mm<sup>2</sup> (Phoenix Contact)
- AI0,5–10WH 0.5 mm<sup>2</sup> (Phoenix Contact)
- AI0,75–10GY 0.75 mm<sup>2</sup> (Phoenix Contact)
- A1–10 1.0 mm<sup>2</sup> (Phoenix Contact)
- A1,5–10 1.5 mm<sup>2</sup> (Phoenix Contact)

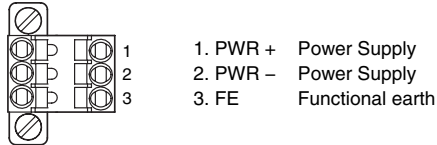

### ■ NETWORK

**Recommended cable connector:** TM21P–88P (Hirose Electric)  
(not included in the package)

#### • COMMUNICATION CONNECTOR PIN ASSIGNMENT CODE: 1

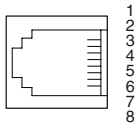


Trunk (CU0A, CU0B)

- |        |             |
|--------|-------------|
| 1. NC  | Unused      |
| 2. NC  | Unused      |
| 3. TR+ | Network (+) |
| 4. TR– | Network (–) |
| 5. NC  | Unused      |
| 6. NC  | Unused      |
| 7. NC  | Unused      |
| 8. SLD | Shield      |

Feeder (CU1, CU2, CU3, CU4, CU5, CU6)

- |        |             |
|--------|-------------|
| 1. NC  | Unused      |
| 2. NC  | Unused      |
| 3. TR+ | Network (+) |
| 4. TR– | Network (–) |
| 5. NC  | Unused      |
| 6. NC  | Unused      |
| 7. NC  | Unused      |
| 8. SLD | Shield      |

#### • COMMUNICATION CONNECTOR PIN ASSIGNMENT CODE: 2

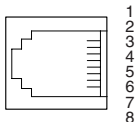


Trunk (CU0A, CU0B)

- |        |             |
|--------|-------------|
| 1. NC  | Unused      |
| 2. NC  | Unused      |
| 3. NC  | Unused      |
| 4. TR– | Network (–) |
| 5. TR+ | Network (+) |
| 6. NC  | Unused      |
| 7. NC  | Unused      |
| 8. SLD | Shield      |

Feeder (CU1, CU2, CU3, CU4, CU5, CU6)

- |        |             |
|--------|-------------|
| 1. NC  | Unused      |
| 2. NC  | Unused      |
| 3. NC  | Unused      |
| 4. TR– | Network (–) |
| 5. TR+ | Network (+) |
| 6. NC  | Unused      |
| 7. NC  | Unused      |
| 8. SLD | Shield      |

### ■ CONNECTION WITH OTHERS

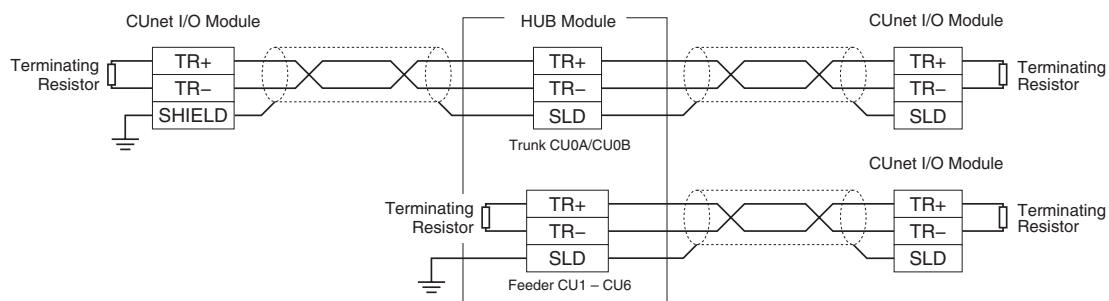


Note: Be sure to turn ON the switch of the terminating resistor located at both ends of the modules.

## MOUNTING INSTRUCTIONS

### ■ DIN RAIL MOUNTING


#### • Mounting

- 1) Set the upper hook at the rear side of the module on the DIN rail.
- 2) Push in the lower.

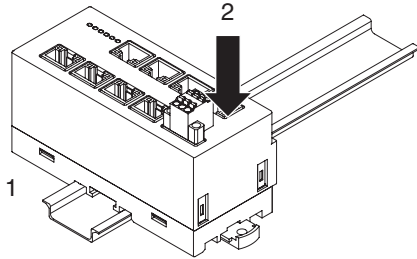


#### • Dismounting

- 1) Push down the DIN rail mounter slider with tip of a minus screwdriver.
- 2) Pull the lower of the module.
- 3) Remove the upper hook of the module from the DIN rail.

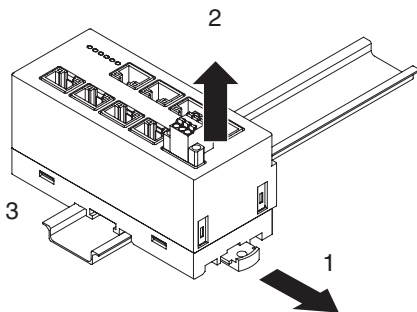


### ■ SURFACE MOUNTING



- 1) Insert the DIN rail mounter slider until it clicks once, as shown below.

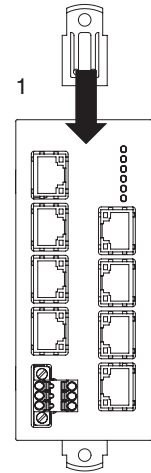

- 2) Mount the module with M4 screws referring the External Dimensions. (Torque: 1.4 N·m)

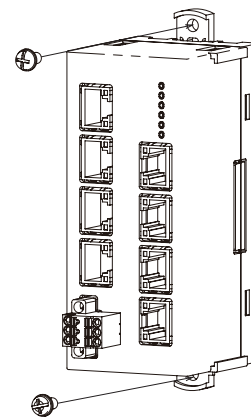

## EXTERNAL DIMENSIONS module: mm (inch)

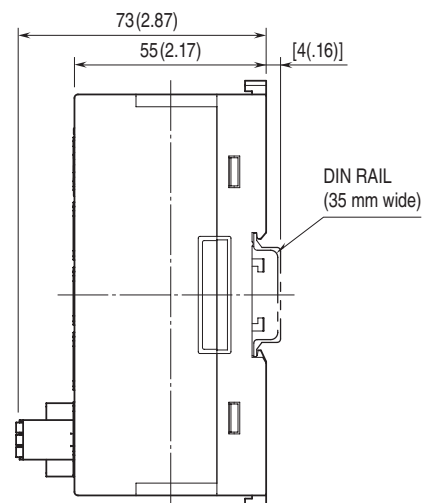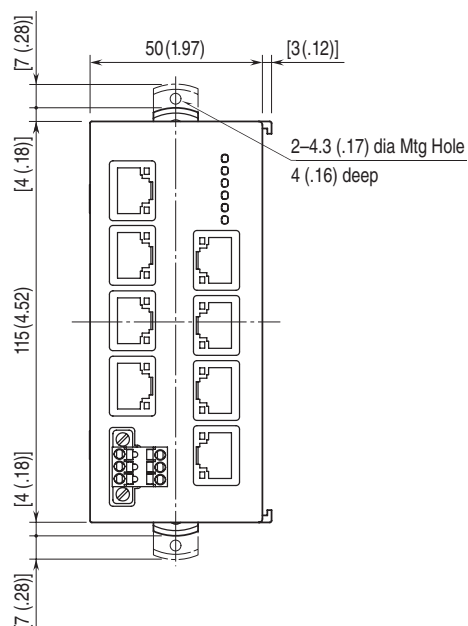


## CONNECTION DIAGRAM

Connect the unit as in the diagram below.


In order to improve EMC performance, bond the FE terminal to ground.

Caution: FE terminal is NOT a protective conductor terminal.


■ JC-CU-3-11

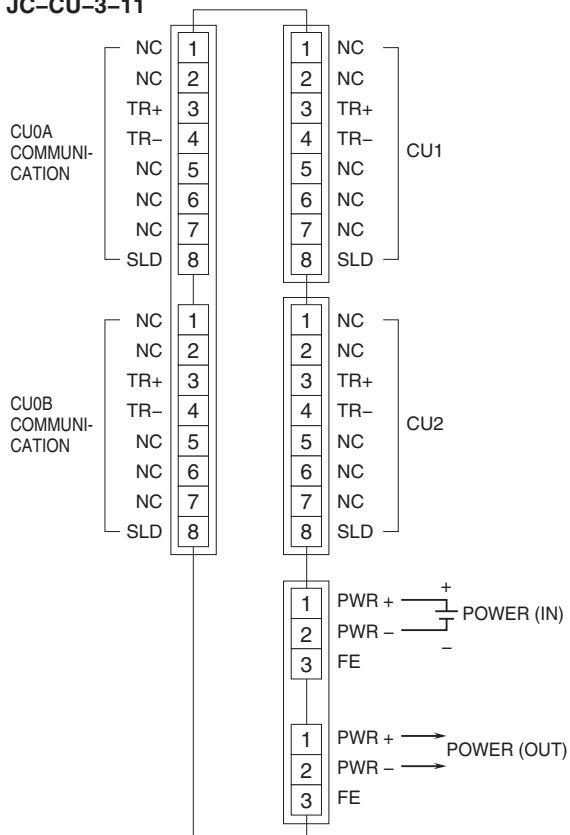


■ JC-CU-3-12

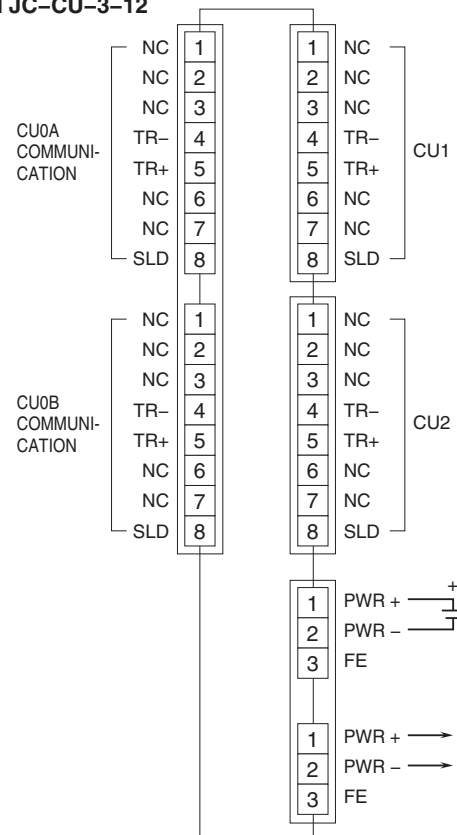


■ JC-CU-7-11

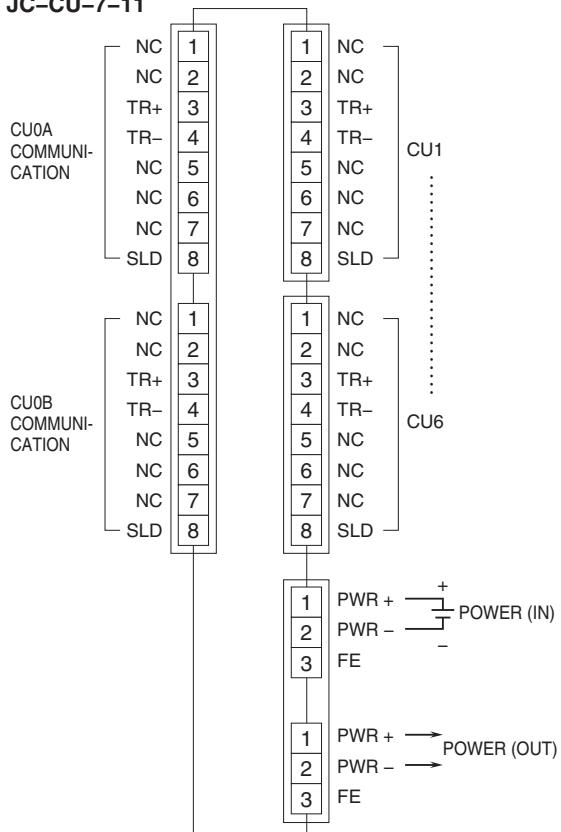

■ JC-CU-7-12

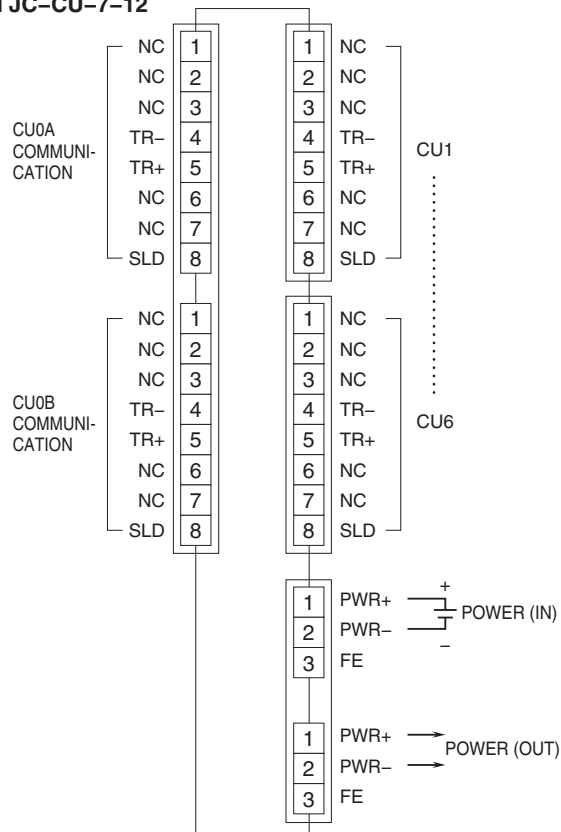

## SYSTEM CONFIGURATION EXAMPLES

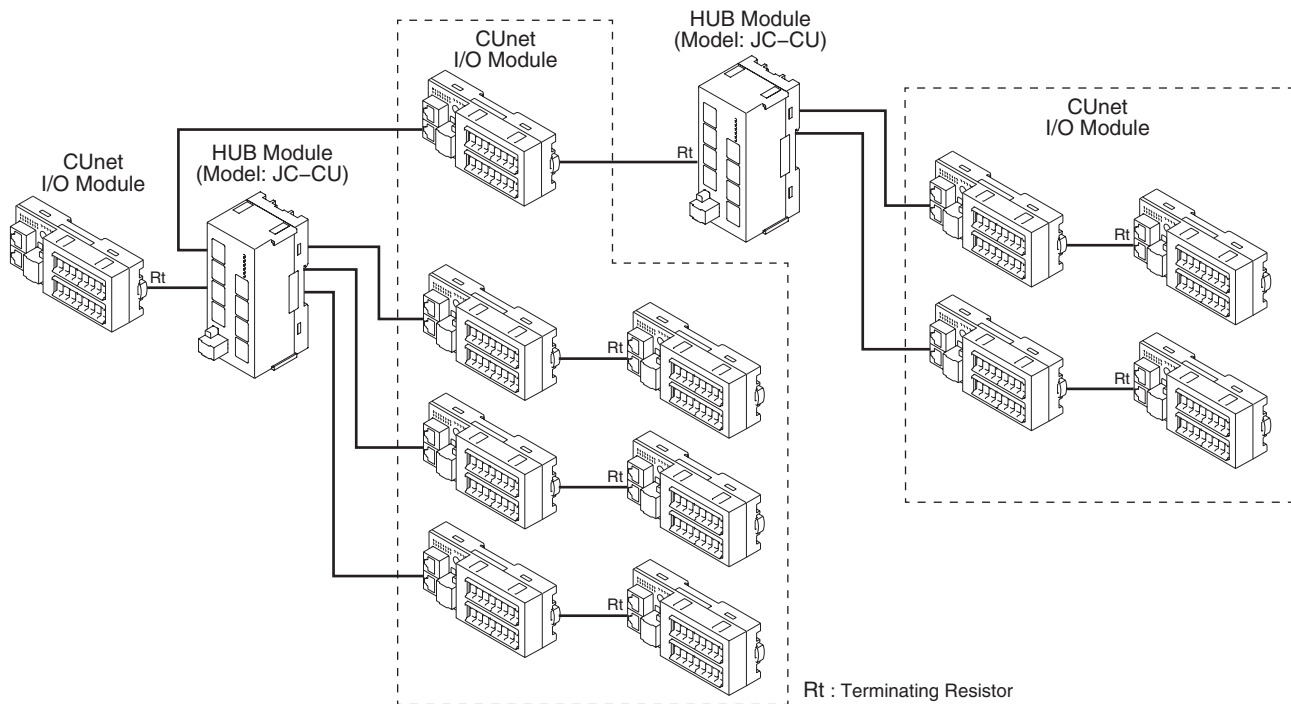


Note 1) Max. transmission distance between CUNet I/O module and HUB module, HUB module and HUB module is as follows.  
100 m at 12 Mbps, 200 m at 6 Mbps and 300 m at 3 Mbps.

Note 2) Be sure to connect CU0A/CU0B to the host side.

Note 3) The terminating resistor must be enabled for the modules at both end of the communication line. The terminating resistor is incorporated in the feeder side port of the HUB module.

## MOUNTING REQUIREMENTS module: mm (inch)

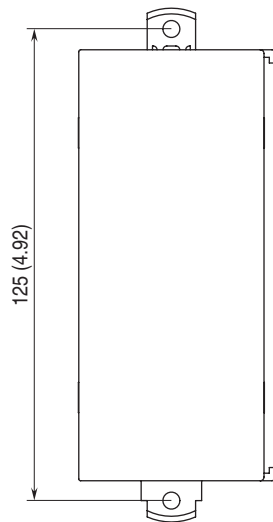

## CONFIGURATIONS

- The configurations such as communication mode and transfer rate must be same for all modules connected to the communication line.
- The terminating resistor must be enabled for the modules at both end of the communication line. The terminating resistors of the modules other than them must be disabled. (The terminating resistor is incorporated in the feeder side port of the JC-CU as it is end of the communication line.)
- In order to use the hub module, it is required to set frame option at any CUNet I/O module connected to network. For detailed information about settings refer to the manual of your CUNet I/O module.