

MECHATROLINK I/O MODULE

(high resolution, high-speed DC voltage/current input,
4 points, isolated, screw terminal block, MECHATROLINK-III use)

MODEL R7G4HML3-6-SVAF4**BEFORE USE**

Thank you for choosing us. Before use, please check contents of the package you received as outlined below.

If you have any problems or questions with the product, please contact our sales office or representatives.

The unit is for use in general industrial environments, therefore may not be suitable for applications which require higher level of safety (e.g. safety or accident prevention systems) or of reliability (e.g. vehicle control or combustion control systems).

For safety, installation and maintenance of this unit must be conducted by qualified personnel.

■ PACKAGE INCLUDES:

High-speed DC voltage/current input module.....(1)
DIN rail mounter slider.....(2)

■ MODEL NO.

Confirm Model No. marking on the product to be exactly what you ordered.

■ INSTRUCTION MANUAL

This manual describes necessary points of caution when you use this product, including installation, connection and basic maintenance procedures.

POINTS OF CAUTION**■ CAUTION**

- If the unit is used in a manner not specified by this manual, the protection provided by the equipment may be impaired.

■ CONFORMITY WITH EU DIRECTIVES

- The equipment must be mounted inside the instrument panel of a metal enclosure.
- The actual installation environments such as panel configurations, connected devices, connected wires, may affect the protection level of this unit when it is integrated in a panel system. The user may have to review the CE requirements in regard to the whole system and employ additional protective measures* to ensure the CE conformity.

* For example, installation of noise filters and clamp filters for the power source, input and output connected to the unit, etc.

- This unit is suitable for Pollution Degree 2.
- Altitude up to 2000 meters.

■ POWER INPUT RATING & OPERATIONAL RANGE

- Locate the power input rating marked on the product and confirm its operational range as indicated below:
24V DC rating: 24V \pm 10%, approx. 100mA

■ GENERAL PRECAUTIONS

- Before you remove the unit or mount it, turn off the power supply and input signal for safety.
- Before you remove the terminal block or mount it, make sure to turn off the power supply and input signal for safety.

■ ENVIRONMENT

- Indoor use.
- When heavy dust or metal particles are present in the air, install the unit inside proper housing with sufficient ventilation.
- Do not install the unit where it is subjected to continuous vibration. Do not subject the unit to physical impact.
- Environmental temperature must be within -10 to +55°C (14 to 131°F) with relative humidity within 30 to 90% RH in order to ensure adequate life span and operation.

■ WIRING


- Do not install cables close to noise sources (relay drive cable, high frequency line, etc.).
- Do not bind these cables together with those in which noises are present. Do not install them in the same duct.
- Be sure to close the terminal cover for safety.

■ AND

- The unit is designed to function as soon as power is supplied, however, a warm up for 10 minutes is required for satisfying complete performance described in the data sheet.

COMPONENT IDENTIFICATION

■ FRONT VIEW

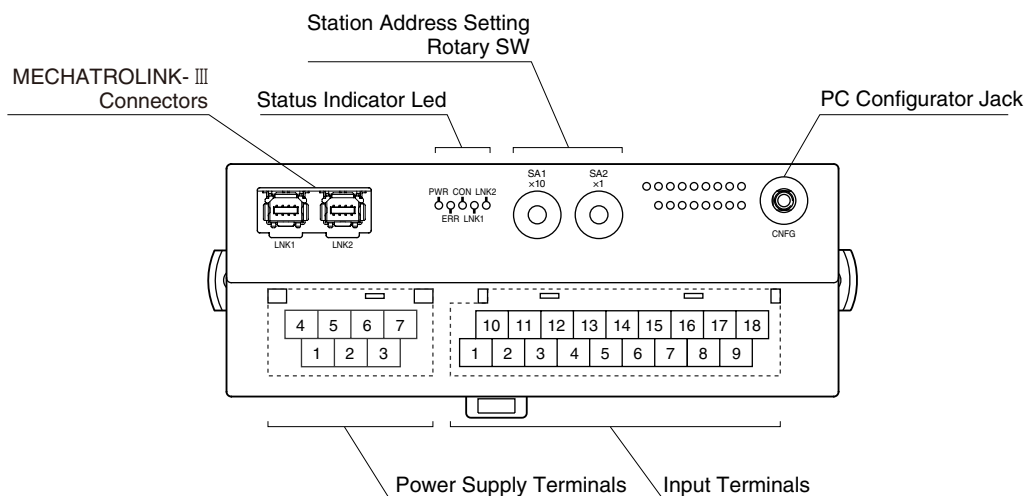

■ STATUS INDICATOR LED


| ID | COLOR | FUNCTION |
|------|-------|--|
| PWR | Green | Turns on when the internal power is supplied normally. |
| ERR | Red | Turns on at MECHATROLINK-III communication error |
| CON | Green | Turns on at MECHATROLINK-III connection is established |
| LNK1 | Green | Turns on at MECHATROLINK-III LNK1 is established |
| LNK2 | Green | Turns on at MECHATROLINK-III LNK2 is established |

■ STATION ADDRESS

Station Address is selected between 03H and EFH in hexadecimal.

The SA1 switch determines the MSD, while the SA2 switch does the LSD of the address.

(Factory setting: 03H)

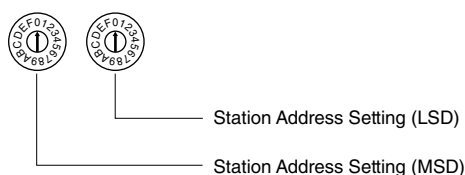

■ POWER SUPPLY TERMINAL ASSIGNMENT

| | | | |
|----|----|------|----|
| 4 | 5 | 6 | 7 |
| NC | NC | +24V | 0V |
| 1 | 2 | 3 | |
| NC | NC | FE | |

- | | |
|---------|-----------------------|
| 1. NC | - |
| 2. NC | - |
| 3. FE | Functional earth |
| 4. NC | - |
| 5. NC | - |
| 6. +24V | Power supply (24V DC) |
| 7. 0V | Power supply (0V) |

■ INPUT TERMINAL ASSIGNMENT

| | | | | | | | | |
|-----|------|-----|------|----|-----|------|-----|------|
| 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 |
| VL0 | I0 | VL1 | I1 | NC | VL2 | I2 | VL3 | I3 |
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
| VH0 | COM0 | VH1 | COM1 | NC | VH2 | COM2 | VH3 | COM3 |

| NO. | ID | FUNCTION | NO. | ID | FUNCTION |
|-----|------|-------------------|-----|-----|---------------------|
| 1 | VH0 | Wide span volt. 0 | 10 | VL0 | Narrow span volt. 0 |
| 2 | COM0 | Common 0 | 11 | I0 | Current range 0 |
| 3 | VH1 | Wide span volt. 1 | 12 | VL1 | Narrow span volt. 1 |
| 4 | COM1 | Common 1 | 13 | I1 | Current range 1 |
| 5 | NC | No connection | 14 | NC | No connection |
| 6 | VH2 | Wide span volt. 2 | 15 | VL2 | Narrow span volt. 2 |
| 7 | COM2 | Common 2 | 16 | I2 | Current range 2 |
| 8 | VH3 | Wide span volt. 3 | 17 | VL3 | Narrow span volt. 3 |
| 9 | COM3 | Common 3 | 18 | I3 | Current range 3 |

INPUT RANGE

- **Wide span:** -10 – +10V DC, -5 – +5V DC, 0 – 10V DC, 0 – 5V DC, 1 – 5V DC
- **Narrow span:** -1 – +1V DC, 0 – 1V DC, -0.5 – +0.5V DC
- **Current input:** -20 – +20mA DC, 0 – 20mA DC, 4 – 20mA DC

PC CONFIGURATOR

The following parameter items can be set with using PC Configurator Software (model: R7CFG).
Refer to the users manual for the R7CFG for detailed operation of the software program.

■ CHANNEL INDIVIDUAL SETTING

| PARAMETER | SETTING RANGE | DEFAULT SETTING |
|----------------|---|-----------------|
| Unused setting | CH enabled CH disabled | CH enabled |
| Input range | -10 – +10V DC -5 – +5V DC -1 – +1V DC 0 – 10V DC 0 – 5V DC 1 – 5V DC 0 – 1V DC -0.5 – +0.5V DC -20 – +20mA DC 0 – 20mA DC 4 – 20mA DC | -10 to +10V DC |
| Bias | -320.00 – +320.00 (%) | 0.00 (%) |
| Gain | -3.2000 – +3.2000 | 1.0000 |
| Zero scale | -32,768 – +32,767 or 0 – 65,535 | -32,768 |
| Full scale | -32,768 – +32,767 or 0 – 65,535 | 32,767 |

■ CHANNEL BATCH SETTING


| PARAMETER | SETTING RANGE | DEFAULT SETTING |
|----------------|----------------------------------|-----------------|
| Moving average | 1, 2, 4, 8, 16, 32, 64, 128, 256 | 1 |

MOUNTING INSTRUCTIONS

■ DIN RAIL MOUNTING (PARALLEL)


• Mounting

- 1) Set the upper hook at the rear side of the unit on the DIN rail.
- 2) Push in the lower.

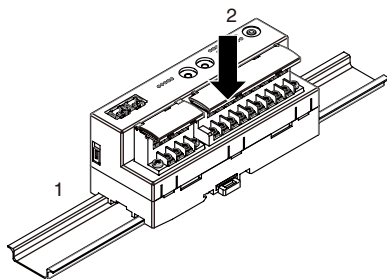

• Dismounting


- 1) Push down the DIN rail mounter slider with tip of a minus screwdriver.
- 2) Pull the lower of the unit.
- 3) Remove the upper hook of the unit from the DIN rail.

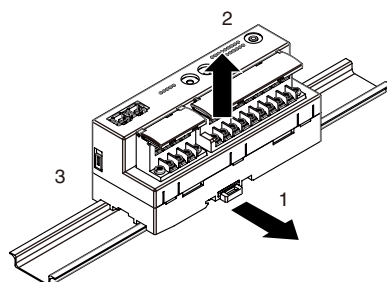


■ DIN RAIL MOUNTING (RIGHT ANGLE)

• Mounting

- 1) Insert the longer DIN rail mounter slider until it clicks twice, as shown below.

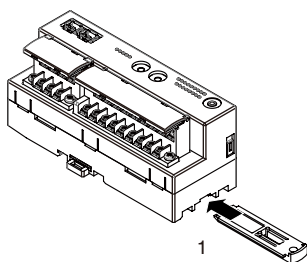


- 2) Set the upper hook at the rear side of the unit on the DIN rail.
- 3) Push in the lower.

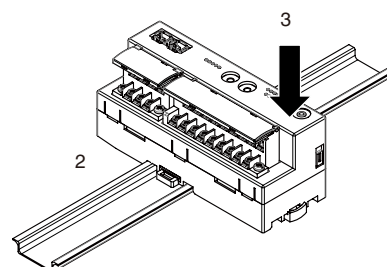


• Dismounting

- 1) Push down the DIN rail mounter slider with tip of a minus screwdriver.
- 2) Pull the lower of the unit.
- 3) Remove the upper hook of the unit from the DIN rail.

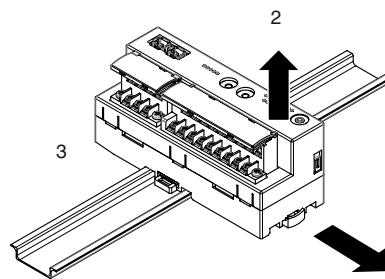


■ SURFACE MOUNTING

- 1) Insert the two DIN rail mounter sliders until it clicks once, as shown below.




- 2) Mount the unit with M4 screws referring the External Dimensions. (Torque: 1.4 N·m)

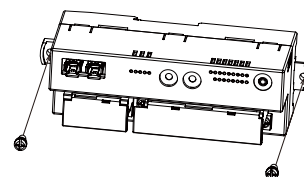

TERMINAL CONNECTIONS

Connect the unit as in the diagram below.


EXTERNAL DIMENSIONS unit: mm [inch]

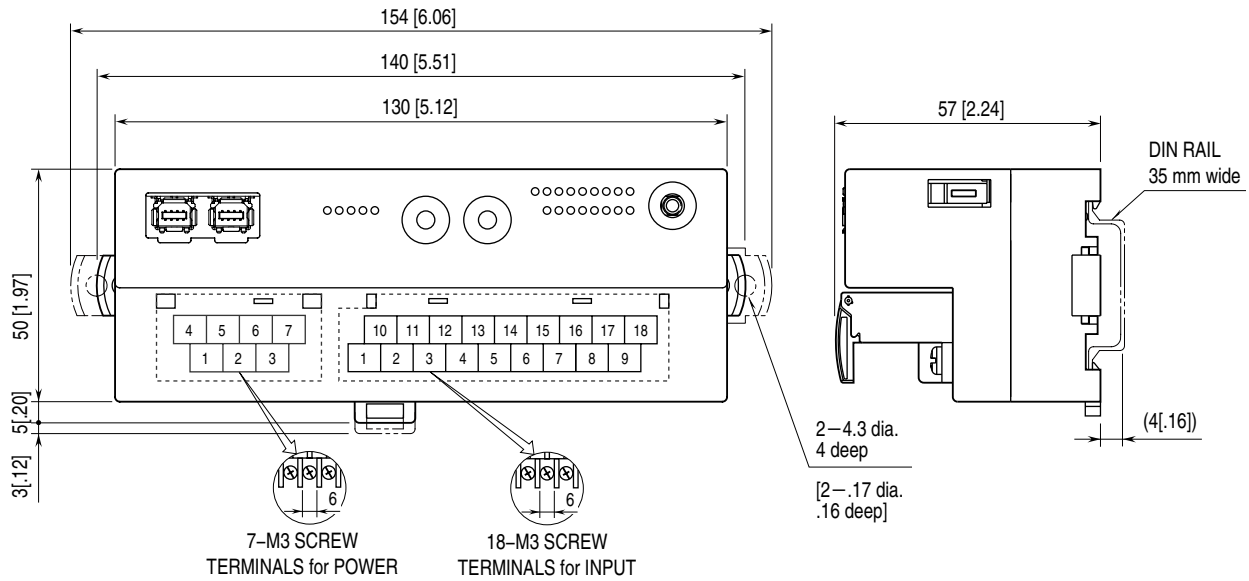


CONNECTION DIAGRAM

Note: In order to improve EMC performance, bond the FE terminal to ground.

Caution: FE terminal is NOT a protective conductor terminal.

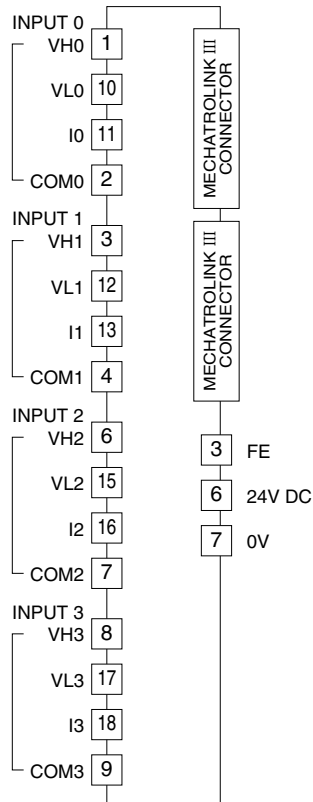


INPUT CONNECTION EXAMPLES

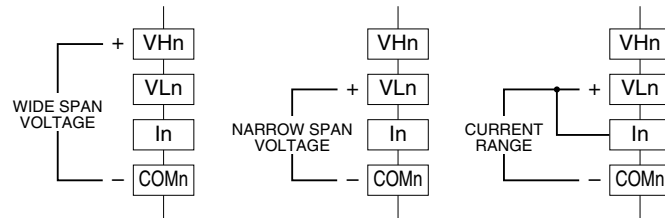

Be sure to close across VLn and In terminals for a current input.

MOUNTING REQUIREMENTS unit: mm [inch]

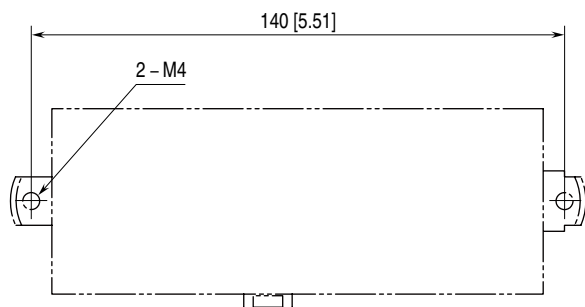

WIRING INSTRUCTIONS

■ TORQUE

Wiring screw for separable terminal: 0.5 N·m

Fixing screw for separable terminal: 0.5 N·m


■ SOLDERLESS TERMINAL

Refer to the drawing below for recommended ring tongue terminal size. Spade tongue type is also applicable.

Applicable wire size: 0.25 to 1.65 mm² (AWG 22 to 16)

Recommended manufacturer: Japan Solderless Terminal

MFG. Co., Ltd, Nichifu Co., Ltd

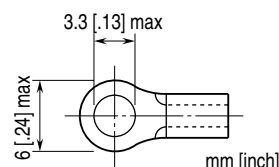

■ HOW TO UNMOUNT THE SEPARABLE TERMINAL

The separable terminal of the unit is 2 piece constructions. It is possible to remove the terminal by loosening two screws of terminal alternately.

MECHATROLINK-III COMMUNICATION

Transmission cycle: 125 μsec., 250 μsec., 500 μsec., 1 – 64 msec. (with 1 msec. increments)

Communication cycle: 125 μsec. through 64 msec.

Applicable profile: Standard I/O profile (cyclic communication)

Event-driven communication acquiring ID profile (event-driven communication)

Transmission bytes: 16 bytes

Station address: 03H through EFH (set with rotary switches)

Cyclic communication: Available

Event-driven communication: Available

Slave monitoring: None

MECHATROLINK-III RELATED COMMANDS

Commands available with this unit are the following.

| PROFILE | COMMAND | CODE | FUNCTION |
|----------------------|------------|------|--------------------------------|
| Common command | NOP | 00H | No operation command |
| | ID_RD | 03H | Read ID command |
| | CONFIG | 04H | Setup device command |
| | ALM_RD | 05H | Read alarm or warning command |
| | ALM_CLR | 06H | Clear alarm or warning command |
| | CONNECT | 0EH | Establish connection command |
| | DISCONNECT | 0FH | Release connection command |
| Standard I/O profile | DATA_RWA | 20H | Transmit I/O data |

• NOP (00H)

Does nothing except sending back current status

| BYTE | COMMAND | RESPONSE | REMARKS |
|------|-----------|-----------|-----------------------------|
| 0 | NOP (00H) | NOP (00H) | No operation command |
| 1 | 00H | 00H | Not used |
| 2 | CMD_CTRL | CMD_STAT | Refer to CMD_CTRL/CMD_STAT. |
| 3 | | | |
| ≥ 4 | 00H | 00H | Reserve |

• ID_RD (03H)

Reads the product ID.

| BYTE | COMMAND | RESPONSE | REMARKS |
|------|-------------|-------------|---|
| 0 | ID_RD (03H) | ID_RD (03H) | Read ID command |
| 1 | 00H | 00H | Not used |
| 2 | CMD_CTRL | CMD_STAT | Refer to CMD_CTRL/CMD_STAT. |
| 3 | | | |
| 4 | ID_CODE | ID_CODE | Refer to ID_CODE |
| 5 | OFFSET | OFFSET | OFFSET: designates the place to read data |
| 6 | SIZE | SIZE | SIZE: specify the size of data to read |
| 7 | | | |
| ≥ 8 | 00H | ID | Product's ID |

• CONFIG (04H)

No parameter to set for this unit. Immediately response with completion.

| BYTE | COMMAND | RESPONSE | REMARKS |
|------|--------------|--------------|--|
| 0 | CONFIG (04H) | CONFIG (04H) | Setup device command |
| 1 | 00H | 00H | Not used |
| 2 | CMD_CTRL | CMD_STAT | Refer to CMD_CTRL/CMD_STAT. |
| 3 | | | |
| 4 | 00H | 00H | Recalculation of parameters and set up. Other than 00H is not supported. |
| ≥ 5 | 00H | 00H | Reserve |

• ALM_RD (05H)

Reads alarm or warning

| BYTE | COMMAND | RESPONSE | REMARKS |
|------|--------------|--------------|--|
| 0 | ALM_RD (05H) | ALM_RD (05H) | Read alarm or warning command |
| 1 | 00H | 00H | Not used |
| 2 | CMD_CTRL | CMD_STAT | Refer to CMD_CTRL/CMD_STAT. |
| 3 | | | |
| 4 | 0000H | 0000H | Read current alarm or warning. 12 points max. (2 bytes in 8th to 31st byte) Other than 0000H is not available. |
| 5 | | | |
| 6 | 0000H | 0000H | 0 |
| 7 | | | |
| ≥ 8 | 00H | 00H | 0 |

• ALM_CLR (06H)

Clears alarm or warning

| BYTE | COMMAND | RESPONSE | REMARKS |
|------|---------------|---------------|--|
| 0 | ALM_CLR (06H) | ALM_CLR (06H) | Clear alarm or warning command |
| 1 | 00H | 00H | Not used |
| 2 | CMD_CTRL | CMD_STAT | Refer to CMD_CTRL/CMD_STAT. |
| 3 | | | |
| 4 | 0000H | 0000H | Clear current alarm or warning. Other than 0000H is not available. |
| 5 | | | |
| ≥ 6 | 00H | 00H | Reserve |

• CONNECT (0EH)

Starts communication with master station.

| BYTE | COMMAND | RESPONSE | REMARKS |
|------|---------------|---------------|---|
| 0 | CONNECT (0EH) | CONNECT (0EH) | Establish connection command |
| 1 | 00H | 00H | Not used |
| 2 | CMD_CTRL | CMD_STAT | Refer to CMD_CTRL/CMD_STAT. |
| 3 | | | |
| 4 | 30H | 30H | MECHATROLINK application layer: 30H |
| 5 | 00H | 00H | Communication mode: Asynchronous, single transmission, subcommand disabled |
| 6 | COM_TIME | COM_TIME | Communication cycle: Multiple of transmission cycle. E.g. Transmission cycle: 0.5 msec., communication cycle: 2 msec. Set 4 (=2/0.5) |
| 7 | 30H or 01H | 30H or 01H | Profile type 30H: Standard I/O profile 01H: Event-driven communication acquiring ID profile |
| ≥ 8 | 00H | 00H | Reserve |

• DISCONNECT (0FH)

Stops communication with master station.

| BYTE | COMMAND | RESPONSE | REMARKS |
|------|------------------|------------------|----------------------------|
| 0 | DISCONNECT (0FH) | DISCONNECT (0FH) | Release connection command |
| ≥ 1 | 00H | 00H | Reserve |

• DATA_RWA (20H)

Transmits I/O data to master station. Data allocation is following.

Data size is 16 bytes.

| BYTE | COMMAND | RESPONSE | REMARKS |
|------|----------------|----------------|-------------------------------|
| 0 | DATA_RWA (20H) | DATA_RWA (20H) | Transmit I/O data |
| 1 | 00H | 00H | Not used |
| 2 | CMD_CTRL | CMD_STAT | Refer to CMD_CTRL/CMD_STAT. |
| 3 | | | |
| 4 | 00H | CH0 IN LO | Lower byte of CH0 |
| 5 | 00H | CH0 IN HI | Upper byte of CH0 |
| 6 | 00H | CH1 IN LO | Lower byte of CH1 |
| 7 | 00H | CH1 IN HI | Upper byte of CH1 |
| 8 | 00H | CH2 IN LO | Lower byte of CH2 |
| 9 | 00H | CH2 IN HI | Upper byte of CH2 |
| 10 | 00H | CH3 IN LO | Lower byte of CH3 |
| 11 | 00H | CH3 IN HI | Upper byte of CH3 |
| 12 | 00H | STATUS LO | Lower byte of R7G4HML3 status |
| 13 | 00H | STATUS HI | Upper byte of R7G4HML3 status |
| 14 | 00H | 00H | Not used |
| 15 | 00H | 00H | Not used |

CMD_CTRL

CMD_CTRL command area is following.

| BIT | FUNCTION | REMARKS |
|--------|----------|---|
| 0 – 2 | Reserve | Not used |
| 3 | ALM_CLR | 0: Clear alarm/warning disabled 1: Clear alarm/warning triggered |
| 4 – 5 | Reserve | Not used |
| 6 – 7 | CMD_ID | Not used in the standard I/O command profile |
| 8 – 15 | Reserve | Not used |

CMD_STAT

CMD_STAT response area is following.

| BIT | FUNCTION | REMARKS | |
|---------|-------------|---|---|
| 0 | D_ALM | Not used | |
| 1 | D_WAR | Not used | |
| 2 | CMDRDY | 1: Command reception enabled 0: Other | |
| 3 | ALM_CLR_CMP | 1: Completion of execution of ALM_CLR 0: Other ALM_CLR_CMP can be canceled by setting '0' for ALM_CLR in CMD_CTRL command area. | |
| 4 – 5 | Reserve | Not used | |
| 6 – 7 | RCMD_ID | Not used in the standard I/O command profile | |
| 8 – 11 | CMD_ALM | Warning | 0: Normal, 1: Invalid data |
| | | Alarm | 8: Unsupported command received, 9: Invalid data, A: Command execution condition error, B: Subcommand combination error, C: Phase error |
| 12 – 15 | COMM_ALM | Warning | 0: Normal, 1: FCS error, 2: Command data not received, 3: Synchronous frame not received |
| | | Alarm | 8: FCS error, 9: Command data not received, A: Synchronous frame not received, B: Synchronization time interval error, C: WDT error |


ID_CODE

ID_CODE is following.

| ID_CODE | NAME | SIZE (BYTES) | SUPPORT | VALUE (HEXADECIMAL) | REMARKS |
|---------|---|-----------------|---------|--|---|
| 01H | Vendor ID Code | 4 | Yes | 0x00000021 | MG CO., LTD. |
| 02H | Device Code | 4 | Yes | 0x00000214 | R7G4HML3-6-SVAF4 |
| 03H | Device Version | 4 | Yes | Firmware version | E.g. 1.00 -> 0x0064 |
| 04H | Device Definition File version | 4 | Yes | 0x00001000 | |
| 05H | Extended Address Setting | 4 | Yes | 0x00000001 | |
| 06H | Serial No. | 32 | Yes | Unit serial number | E.g. AB123456 -> 0x32314241 0x36353433 0x00000000 0x00000000 0x00000000 0x00000000 0x00000000 0x00000000 |
| 10H | Profile Type 1 | 4 | Yes | 0x00000030 | Standard I/O profile |
| 11H | Profile Version 1 | 4 | Yes | 0x00000100 | |
| 12H | Profile Type 2 | 4 | Yes | 0x000000FF | Indicates the unit does not support |
| 13H | Profile Version 2 | 4 | Yes | 0x00000000 | |
| 14H | Profile Type 3 | 4 | Yes | 0x000000FF | Indicates the unit does not support |
| 15H | Profile Version 3 | 4 | Yes | 0x00000000 | |
| 16H | Min. Transmission Cycle | 4 | Yes | 0x000030D4 | 125 μ sec. |
| 17H | Max. Transmission Cycle | 4 | Yes | 0x0061A800 | 64 msec. |
| 18H | Increments of Transmission Cycle | 4 | Yes | 0x00000001 | Available to 31.25, 62.5, 125, 250, 500 [μ sec.] & 1 – 64 [msec.] (1 msec. increments) |
| 19H | Min. Communication Cycle | 4 | Yes | 0x000030D4 | 125 μ sec. |
| 1AH | Max. Communication Cycle | 4 | Yes | 0x0061A800 | 64 msec. |
| 1BH | Transmission Bytes | 4 | Yes | 0x00000002 | 16 Bytes |
| 1CH | Transmission Bytes (Current Setting) | 4 | Yes | 0x00000002 | 16 Bytes |
| 1DH | Profile Type (Current Selec- tion) | 4 | Yes | 0x00000001 / 0x00000030 | Event-driven communication / Cyclic com- munication |
| 20H | Supported Communication Mode | 4 | Yes | 0x00000003 | Event-driven communication / Cyclic com- munication |
| 21H | MAC Address | 4 | No | ---- | |
| 30H | List of Supported Main Com- mands | 32 | Yes | 0x0000C079 0x00000001 0x00000000 0x00000000 0x00000000 0x00000000 0x00000000 0x00000000 | ALM_CLR, ALM_RD, CONFIG, ID_RD, NOP, DISCONNECT, CONNECT, DATA_RWA |
| 38H | List of Supported Sub Com- mands | 32 | No | ---- | |
| 40H | List of Common Parameters | 32 | No | ---- | |
| 80H | Main Device Name | 32 | Yes | 0x34473752 0x334C4D48 0x532D362D 0x00344656 0x00000000 0x00000000 0x00000000 0x00000000 | “R7G4HML3-6-SVAF4” |
| 90H | Sub Device 1 Name | 4 | No | ---- | |
| 98H | Sub Device 1 Version | 32 | No | ---- | |
| A0H | Sub Device 2 Name | 4 | No | ---- | |
| A8H | Sub Device 2 Version | 32 | No | ---- | |
| B0H | Sub Device 3 Name | 4 | No | ---- | |
| B8H | Sub Device 3 Version | 32 | No | ---- | |


I/O DATA DESCRIPTION

■ ANALOG INPUT MODULE



Data is represented in 16-bit binary. Negative value is represented in 2's complements.

■ STATUS

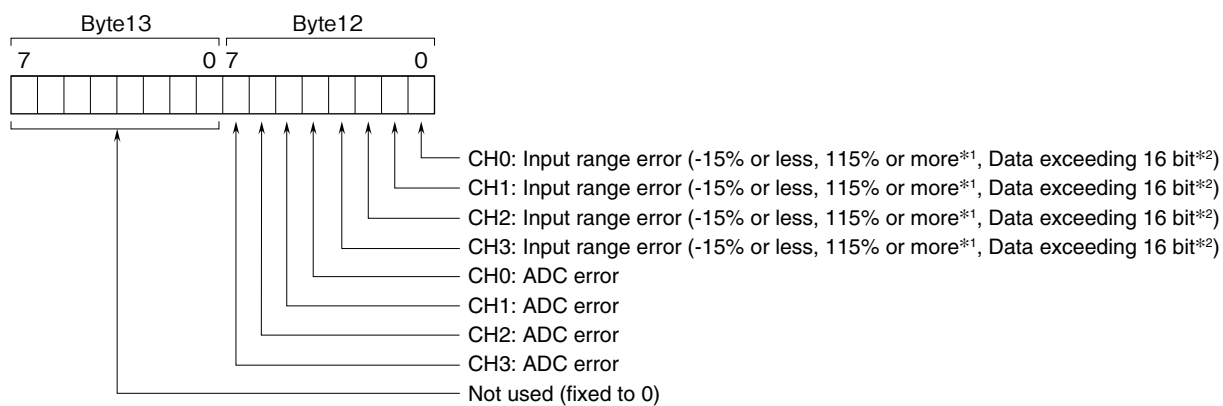

Input range error

0: normal, 1: error

ADC error (no response from ADC)

0: normal, 1: error

*1. In $\pm 10V$ range, $\pm 1V$ range or $\pm 20mA$ range, -7.5% or less, 107.5% or more

*2. Data type: In case of 'signed', 0 or less, 65535 or more

Data type: In case of 'unsigned', -32768 or less, 32767 or more