PC RECORDER

(Bus powered USB, 16 points DC input, 2 points dry contact, 2 points photo MOSFET relay output, tension clamp terminal)

MODEL R7K4GUS-G16D4

BEFORE USE

Thank you for choosing us. Before use, please check contents of the package you received as outlined below. If you have any problems or questions with the product, please contact our sales office or representatives.

This equipment is for use in general industrial environments, therefore may not be suitable for applications which require higher level of safety (e.g. safety or accident prevention systems) or of reliability (e.g. vehicle control or combustion control systems).

For safety, installation and maintenance of this equipment must be conducted by qualified personnel.

■ PACKAGE INCLUDES:

PC recorder.....(1)

■ MODEL NO.

Confirm Model No. marking on the product to be exactly what you ordered.

■ INSTRUCTION MANUAL

This manual describes necessary points of caution when you use this product, including installation, connection and basic maintenance procedures.

POINTS OF CAUTION

■ CONFORMITY WITH EU DIRECTIVES

- The equipment must be mounted inside the instrument panel of a metal enclosure.
- The actual installation environments such as panel configurations, connected devices, connected wires, may affect the protection level of this unit when it is integrated in a panel system. The user may have to review the CE requirements in regard to the whole system and employ additional protective measures* to ensure the CE conformity.
 - * For example, installation of noise filters and clamp filters for the power source, input and output connected to the unit, etc.

■ POWER INPUT RATING & OPERATIONAL RANGE

- Locate the power input rating marked on the product and confirm its operational range as indicated below: 5 V DC power input by USB bus powered: ≤ 120 mA
- The R7K4GUS-G16D4 is a high power device supplied through the USB port.
- The USB high power port must be capable of 500 mA power consumption. When connecting the R7K4GUS-G16D4 to a USB hub, choose the self-powered configuration. Laptop PC's supply current may be limited by its battery power.
- Confirm the USB port's current capacity in advance.

■ GENERAL PRECAUTIONS

 Before you remove the unit or mount it, turn off the power supply and I/O signal for safety.

■ ENVIRONMENT

- Indoor use.
- When heavy dust or metal particles are present in the air, install the unit inside proper housing with sufficient ventilation.
- Do not install the unit where it is subjected to continuous vibration. Do not subject the unit to physical impact.
- Environmental temperature must be within -10 to +55°C (14 to 131°F) with relative humidity within 30 to 90% RH in order to ensure adequate life span and operation.
- Be sure that the ventilation slits are not covered with cables, etc.

■ WIRING

- Wrong connection may damage the module.
- Do not pull cables tightly.
- Do not install cables close to noise sources (relay drive cable, high frequency line, etc.).
- Do not bind these cables together with those in which noises are present. Do not install them in the same duct.

■ CONNECTING/DISCONNECTING TO THE PC

- Do not connect/disconnect the R7K4GUS-G16D4 while the PC Recorder software program is running (when the screen is not in pause).
- Wait that RUN LED turns on before starting recording.


■ USB HUB

• In certain system configurations using a USB hub/switch, there are possibilities of missing sampling due to delays at the hub. We recommend to limit the number of connected devices to the minimum if a hub must be used.

■ AND ..

• The unit is designed to function as soon as power is supplied, however, a warm up for 10 minutes is required for satisfying complete performance described in the data sheet.

COMPONENT IDENTIFICATION

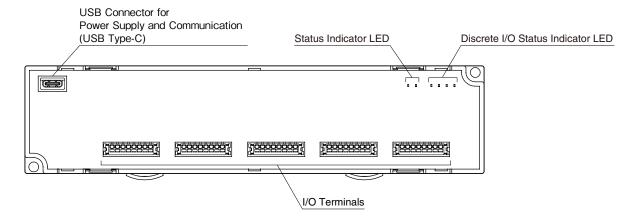

■ STATUS INDICATOR LED

ID	STATUS	COLOR	FUNCTION
PWR	ON	Green	The power is supplied
	OFF	ı	No power is supplied.
RUN	ON	Green	Communicating
	OFF	_	No communication

■ DISCRETE I/O STATUS INDICATOR LED

LED green indicators shows the signal status.

ON: LED ON OFF: LED OFF


■ POWER SUPPLY, I/O TERMINAL ASSIGNMENT

Unit side connector: PTSM0,5/8-2,5-V SMD R44 (Phoenix Contact)

Applicable wire size: 0.25 - 0.34mm²

Stripped length: 6mm

Recommended solderless terminal AI0,25-6BU 0.25mm² (Phoenix Contact) AI0,25-6YE 0.25mm² (Phoenix Contact) AI0,34-6TQ 0.34mm² (Phoenix Contact)



· DISCRETE I/O

PIN	ID	FUNCTION		
NO.	טו			
1	DO2	Photo MOSFET output 2		
2	DO2	Photo MOSFET output 2		
3	DO1	Photo MOSFET output 1		
4	DO1	Photo MOSFET output 1		
5	-	Unused		
6	DI2	Discrete input 2		
7	DI1	Discrete input 1		
8	COM	Common		

· ANALOG INPUT


PIN NO.	ID	FUNCTION	PIN NO.	ID	FUNCTION	PIN NO.	ID	FUNCTION	PIN NO.	ID	FUNCTION
1	Al4-	Input 4-	1	Al8-	Input 8-	1	Al12-	Input 12-	1	Al16-	Input 16-
2	Al4+	Input 4+	2	Al8+	Input 8+	2	Al12+	Input 12+	2	Al16+	Input 16+
3	AI3-	Input 3-	3	AI7-	Input 7-	3	Al11-	Input 11-	3	Al15-	Input 15-
4	Al3+	Input 3+	4	Al7+	Input 7+	4	Al11+	Input 11+	4	Al15+	Input 15+
5	Al2-	Input 2-	5	Al6-	Input 6-	5	Al10-	Input 10-	5	Al14-	Input 14-
6	Al2+	Input 2+	6	Al6+	Input 6+	6	Al10+	Input 10+	6	Al14+	Input 14+
7	Al1-	Input 1-	7	Al5-	Input 5-	7	Al9-	Input 9-	7	Al13-	Input 13-
- 8	Al1+	Input 1+	8	Al5+	Input 5+	8	Al9+	Input 9+	8	AI13+	Input 13+

MOUNTING INSTRUCTIONS

■ DIN RAIL MOUNTING

Mounting

- 1) Set the upper hook at the rear side of the unit on the DIN rail.
- 2) Push in the lower.

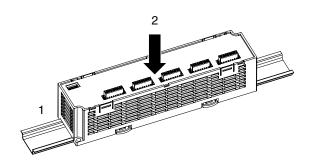


■ SURFACE MOUNTING (unit: mm [inch])

Torque: 1.4 N·m



• Dismounting


- 1) Push down the DIN rail mounter slider with tip of a minus screwdriver.
- 2) Pull the lower of the unit.
- 3) Remove the upper hook of the unit from the DIN rail.

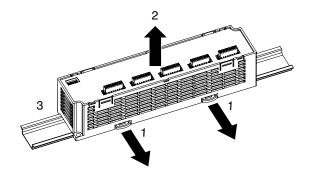


TERMINAL CONNECTIONS

Connect the unit as in the diagram below.

■ EXTERNAL DIMENSIONS unit: mm [inch]

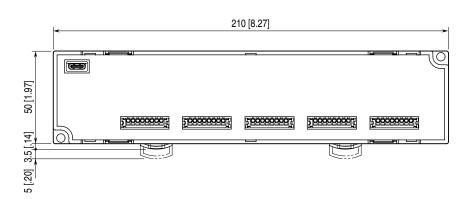

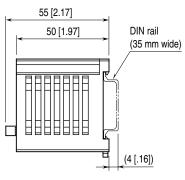

■ CONNECTION DIAGRAM

