

## Final Control Elements

### VALVE POSITIONER


(for LonWorks; built-in SSR)

#### Functions & Features

- LonWorks compatible
- Used for 24 - 200 V AC electric actuator position control
- Position feedback via potentiometer (100 Ω - 10 kΩ unadjusted)
- Direct motor driving with built-in SSR (with zero-cross circuit)
- Restart control timer built-in to prevent motor overheating due to frequent on/off switching

#### Typical Applications

- Retrofitting existing equipment for LonWorks compatibility

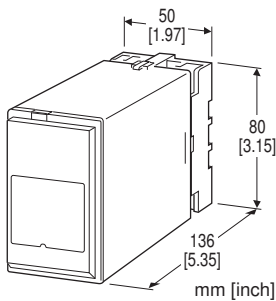

## MODEL: MEXL-11[1]-[2][3]

### ORDERING INFORMATION

- Code number: MEXL-11[1]-[2][3]
- Specify a code from below for each of [1] through [3]. (e.g. MEXL-111-G/Q)
- Specify the specification for option code /Q (e.g. /C01/S01)

### FEEDBACK RESISTANCE

1: Potentiometer

### CONTROL OUTPUT

1: SSRs incorporated

### [1] BREAK

0: None

1: With

### [2] POWER INPUT

AC Power

A: 24 V AC

B: 100 V AC

C: 110 V AC

G: 200 V AC

H: 220 V AC

### [3] OPTIONS

blank: none

/Q: With options (specify the specification)

### SPECIFICATIONS OF OPTION: Q (multiple selections)

COATING (For the detail, refer to our web site.)

/C01: Silicone coating

/C02: Polyurethane coating

/C03: Rubber coating

TERMINAL SCREW MATERIAL

/S01: Stainless steel

### EXTERNAL INTERFACE FILE

MEXL external interface file MEXL.XIF downloadable at our web site.

### GENERAL SPECIFICATIONS

Construction: Plug-in

Connection: M3.5 screw terminals

Screw terminal: Chromated steel (standard) or stainless steel

Housing material: Flame-resistant resin (black)

Full-closed position adjustment range: 0 - 25 % (front)

Full-open position adjustment range: 75 - 100 % (front)

Deadband adjustment: 0.1 - 8.0 % (front adj.; refer to the table below)

Isolation: LonWorks to feedback potentiometer to control output to power to ground

RUN LED:

Blinking at 0.5 Hz in normal operating conditions

Blinking at 2 Hz when lock protection timer is operating

Blinking at 5 Hz for 3 seconds during Wink

Manual operation switch: Manual full-close or full-open position command

#### Deadband adjustment

Deadband adj. SW	Deadband (%)
0	0.1
1	0.3
2	0.5
3	0.7
4	1.0
5	1.5
6	2.0
7	3.0
8	5.0
9	8.0

## LonWorks COMMUNICATION

**Neuron chip:** TMPN3120  
**Transceiver:** FTT-10A (78 kbps, free topology)  
**Service pin:** Node structure, for installation  
**Reset switch:** Neuron chip reset  
**Service LED:** ON when no valid application code is held or when malfunctioning  
 Blinking at 0.5 Hz when network address information is not configured


## INPUT SPECIFICATIONS

- **Feedback potentiometer:** 100  $\Omega$  - 10 k $\Omega$

**Minimum span:** 50 % of total resistance  
**Excitation:** 3.3 V DC

## OUTPUT SPECIFICATIONS

**Control Output:** SSR (zero-crossing); 20 - 240 V AC 0.1 - 1 A  
**Output operation:** Terminal no. in ( ).




## INSTALLATION

**Power input**  
 • **AC:** Operational voltage range: rating  $\pm 10$  %, 50/60  $\pm 2$  Hz, approx. 3 VA  
**Operating temperature:** -5 to +60°C (23 to 140°F)  
**Operating humidity:** 30 to 90 %RH (non-condensing)  
**Mounting:** Surface or DIN rail  
**Weight:** 300 g (0.66 lb)

## PERFORMANCE


**Insulation resistance:**  $\geq 100$  M $\Omega$  with 500 V DC  
**Dielectric strength:** 2000 V AC @ 1 minute (LonWorks or feedback potentiometer to control output to power to ground)  
 500 V AC @1 minute (LonWorks to feedback potentiometer)

## EXTERNAL VIEW

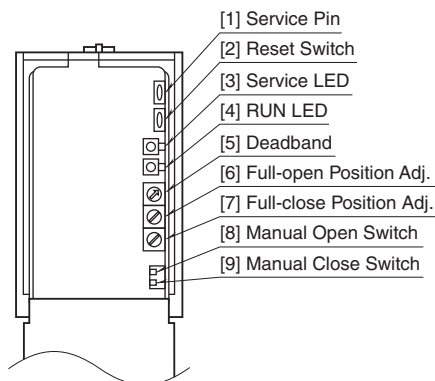


## NETWORK VARIABLES

Refer to the instruction manual for details.

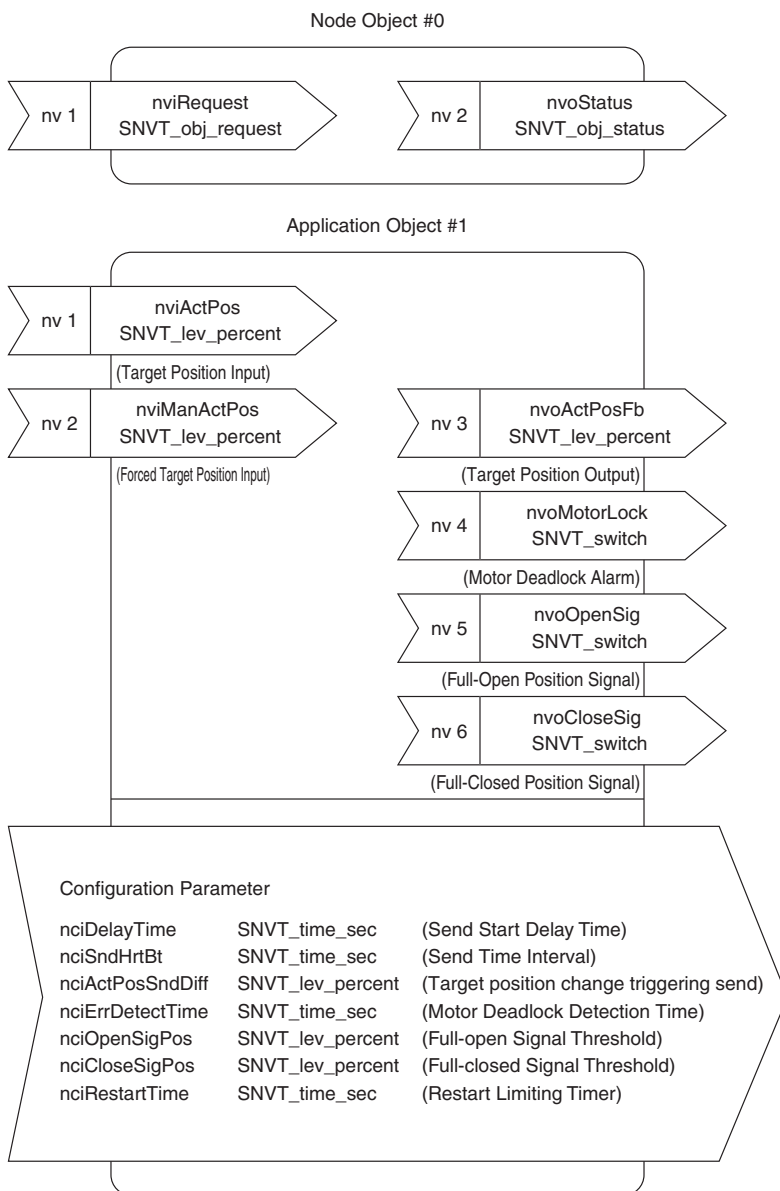


## EXTERNAL DIMENSIONS & TERMINAL ASSIGNMENTS unit: mm [inch]

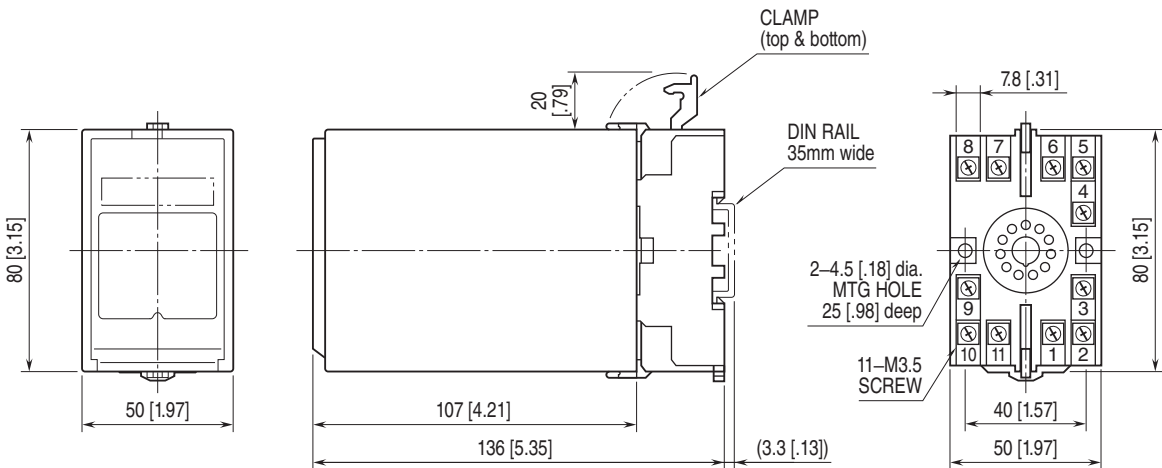

• When mounting, no extra space is needed between units.

## SCHEMATIC CIRCUITRY & CONNECTION DIAGRAM

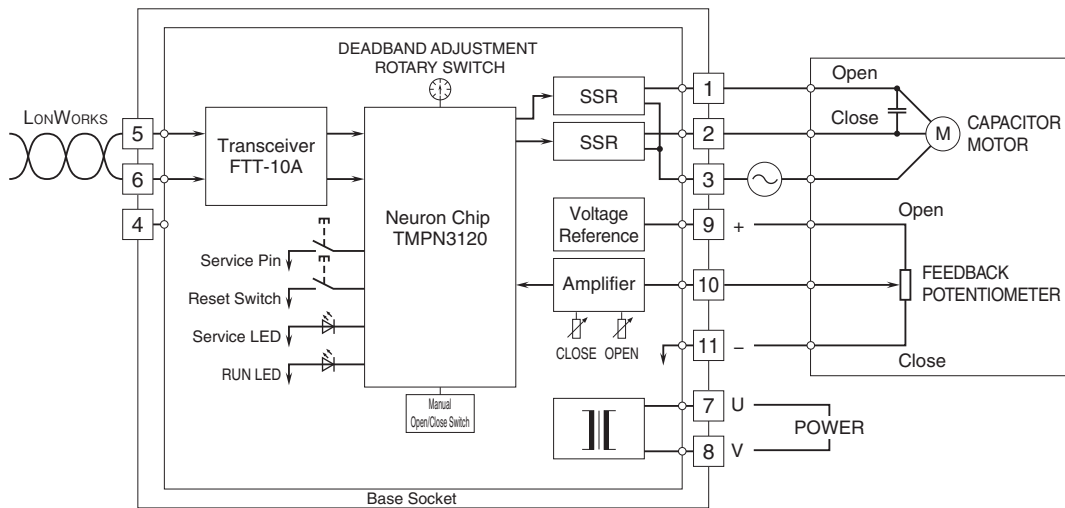

Note: Note that when limit switches inserted in motor wiring, the making/breaking may cause stress on the SSRs.

## EXPLANATIONS OF TERMS

### • SSR (Solid State Relay)

Composed only of semiconductor parts, SSR is free from arc discharge or chattering which is typical with electromagnetic relays. It features excellent characteristics against vibration, physical impact or other environmental conditions.

### • Zero-Cross Function

SSR with zero-cross function turns on when AC power voltage is near zero, creating delay of switching when input is provided in the middle of an wave cycle, thus limiting transient switching noise voltage and rush current.



Specifications are subject to change without notice.