
## Remote I/O R8 Series

## DC CURRENT OUTPUT MODULE

(built-in excitation, 2 points, non-isolated)

#### **Functions & Features**

- 2 channels for DC current output, compact size remote I/O module
- Output range adjustment with DIP switch or PC configurator
- Excitation supply for sensor available from output connector

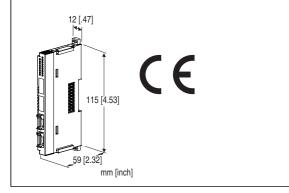

MODEL: R8-YS2NJ[1]

### ORDERING INFORMATION

Code number: R8-YS2NJ[1]
 Specify a code from below for [1].
 (e.g. R8-YS2NJ/Q)

 Specify the specification for option code /Q (e.g. /C01)

### [1] OPTIONS

blank: none

/Q: With options (specify the specification)

## **SPECIFICATIONS OF OPTION: Q**

COATING (For the detail, refer to our web site.)

/C01: Silicone coating /C02: Polyurethane coating

## **RELATED PRODUCTS**

• PC configurator software (model: R8CFG)

Downloadable at our web site.

A dedicated cable is required to

A dedicated cable is required to connect the module to the PC. Please refer to the internet software download site or the users manual for the PC configurator for applicable cable types.

## **GENERAL SPECIFICATIONS**

#### Connection

•Output: 4-pin e-CON connector

Unit side connector XN2D-1474-S002 (Omron)

Recommended cable side connector XN2A-1470 (Omron)

Applicable wire size 0.08 - 0.5 mm<sup>2</sup> (AWG28 - 20)

Outer sheath diameter: max. 1.5 dia

(The cable connector is not included in the package.

Refer to the specifications of the product.)

Excitation supply, internal bus:

Connected to internal bus connector

•Internal power: Supplied from internal bus connector Isolation: Output 1 or output 2 to exc. supply to internal bus

or internal power

Output range: Selectable with the side DIP SW

Module address: With rotary switch

Output at the loss of communication: Selectable with the

side DIP SW

**Terminating resistor**: Built-in (DIP Switch, default: disable) **Configuration mode**: With DIP switches on the side panel **Status indicator**: Bi-color (red/green) LED; Refer to the

instruction manual.

Output status indicators: Red LED; Refer to the instruction

manual.

### **OUTPUT**

Output range: Selectable between 0 - 20mA DC

Operational range: -5 - +105 % (in percentage of output

range)  $\leq$  0 mA DC Load resistance:  $\leq$  500 $\Omega$ 

## **INSTALLATION**

Max. current consumption: 70 mA Exc. supply: 24 V DC ±10%

Exc. supply current consumption: 50 mA

(Power supply for output circuit is generated from exc.

supply)

Operating temperature: -10 to +55°C (14 to 131°F)
Operating humidity: 30 to 90 %RH (non-condensing)

Atmosphere: No corrosive gas or heavy dust

**Mounting**: DIN rail **Weight**: 60 g (2.12 oz)

## **PERFORMANCE**

Conversion accuracy (in percentage of output range)

±0.08 % (@ output range 0 - 20 mA)

Conversion accuracy is inversely proportional to output span.

Conversion accuracy computation example:

When output range is 4 - 20 mA: conversion accuracy = output span standard value (20 mA) ÷ output span (16 mA)

**R8-YS2NJ SPECIFICATIONS** 

ES-9744 Rev.3 Page 1/4

 $\times 0.08(\%) = 0.1 (\%).$ 

output span standard value is the same as the span at

output range 0 - 20 mA DC. **Conversion rate**: 2 msec.

Output circuit time constant:  $\leq 1$  msec.  $(0 \rightarrow 90 \%)$ 

Data range: 0 - 10000 of the output range

Data allocation: 2

Module addresses in use: 1

**Power output (between 1 to 4 pin of output connector)**: Rated current 0.5 A DC per channel (rated current 3 A for internal fuse (slow blow fuse i²t (A²sec.) max. 5.04); Total: 1 A DC

Temp. coefficient:  $\pm 0.015$  %/°C ( $\pm 0.008$  %/°F) Insulation resistance:  $\geq 100$  M $\Omega$  with 250 V DC

Dielectric strength:

1500 V AC @ 1 minute (output 1 or output 2 or exc. supply

to internal bus or internal power to ground)

300 V AC @ 1 minute (output 1 or output 2 to exc.supply)

## **STANDARDS & APPROVALS**


EU conformity:

EMC Directive EMI EN 61000-6-4

EMS EN 61000-6-2

**RoHS Directive** 

# **EXTERNAL VIEW**

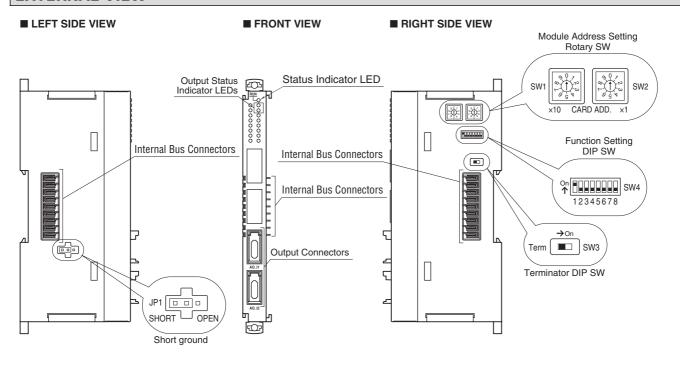

# **SHORT ACROSS GROUNDS**

Choose to open or short across grounds of excitation supply and output.

In case of shorting across, insert short-plug in the center pin of JP1 and SHORT side.

In case of opening, insert short-plug in the center pin of JP1 and OPEN side.

Factory default is on SHORT side.

## **OPERATING MODE SETTING**

#### (\*) Factory setting

Caution! - SW4-2 through 4-6 are unused. Be sure to turn off unused ones.

# ■ Module Address

The left switch determines the tenth place digit, while the right switch does the ones place digit of the address. Address is selected between 0 to 31. (Factory setting: 0)



#### ■ Range

Same range for all channels. Use PC Configurator to set independent ranges per channel.

OUTPUT RANGE	SW4
	1
0 – 20 mA DC	OFF
4 – 20 mA DC (*)	ON

### ■ Output at the Loss of Communication

Same output for all channels.

	SW4
OUTPUT AT THE LOSS OF COMMUNICATION	7
Output Hold (*) (last data correctly received is hold)	OFF
Stop output (Output fixed at -5%, 0 mA min.)	ON


### **■** Configuration Mode

CONFIGURATION MODE	SW4
CONFIGURATION WODE	8
DIP switch setting (*)	OFF
PC Configurator and communication	ON


#### **■** Terminator DIP SW

TERMINATOR SW	SW3
Without (*)	OFF
With	ON

# **EXTERNAL DIMENSIONS** unit: mm [inch]

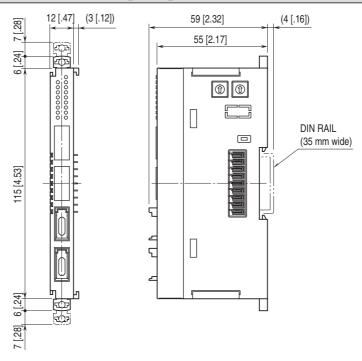

# **SCHEMATIC CIRCUITRY & CONNECTION DIAGRAM**

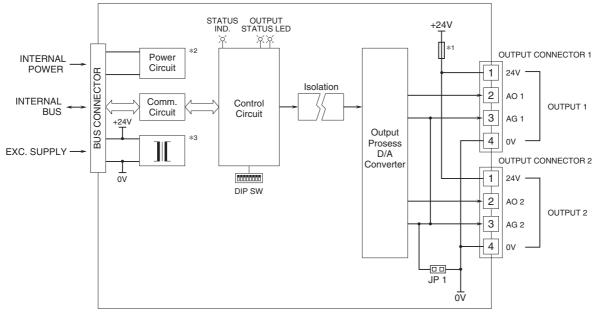

- \*1. Fuse is not replaceable.
- $^{*}$ 2. The power supply for control circuit, which is non-isolated from internal power.
- \*3. The power supply for output 1 and output 2, which is isolated from the Exc. supply and the internal power.

 $\triangle$ 

Specifications are subject to change without notice.